

ORDER NO.SIMMC 0203005C1

E2

Service Manual

Microwave Oven

NN-S262SF / NN-S262BF / NN-S262WF / NN-S252BF / NN-S252WF
APH(USA)
CPH(CANADA)



SPECIFICATIONS

Specifications for APH:

Specifications:	Model:	NN-S262SF APH	NN-S262BF/WF APH	NN-S252BF/WF APH
Power Source:	120V AC Single Phase, 60Hz			
Power Requirement:	1430W		1430W	1430W
Output(IEC705-88):	1200W		1200W	1200W
Microwave Frequency:	*2450MHz			
Timer:	*99 min. 99 sec.			
Outside Dimensions:	*29 ⁷ / ₈ "(759mm)(W) x 15"(381mm)(D) x 16 ⁷ / ₁₆ "(418mm)(H)			
Oven Cavity Dimensions:	*23 ¹ / ₄ "(591mm)(W) x 14 ⁷ / ₁₆ "(367mm)(D) x 9 ¹ / ₂ "(242mm)(H)			
Weight:	*55lbs. (25.0 kg)		*53lbs. (24.0 kg)	*53lbs. (24.0 kg)
PbF	This product with PbF			
Output power: IEC705-88 Test Procedure				
Specifications subject to change without notice.				

Specifications for CPH:

Specifications:	Model:	NN-S262SF CPH	NN-S262BF/WF CPH	NN-S252BF/WF CPH
Power Source:	120V AC Single Phase, 60Hz			
Power Requirement:	1430W	1430W	1430W	
Output(IEC705-88):	1100W	1100W	1100W	
Microwave Frequency:	*2450MHz			
Timer:	*99 min. 99 sec.			
Outside Dimensions:	*29 ⁷ / ₈ "(759mm)(W) x 15"(381mm)(D) x 16 ⁷ / ₁₆ "(418mm)(H)			
Oven Cavity Dimensions:	*23 ¹ / ₄ "(591mm)(W) x 14 ⁷ / ₁₆ "(367mm)(D) x 9 ¹ / ₂ "(242mm)(H)			
Weight:	*55lbs. (25.0 kg)	*53lbs. (24.0 kg)	*53lbs. (24.0 kg)	
PbF	This product with PbF			
Output power: IEC705-88 Test Procedure				
Specifications subject to change without notice.				

© 2002 Shanghai Matsushita Microwave Oven Co., Ltd. / All rights

reserved. Unauthorized copying and distribution is a violation of law.

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product.

Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

WARNING

1. This product should be serviced only by trained, qualified personnel.
2. Though this product has been manufactured in compliance with:
"Federal Performance Standard 21 CFR Subchapter J"(D.H.H.S): U.S.A. models
or "Radiation Emitting Devices Act"(Health and Welfare Canada): Canadian models
it is very important all repairs should be made in accordance with procedures described in this manual to avoid being exposed to excessive microwave radiation.
3. Check for radiation leakage before and after every servicing according to the "procedure for measuring radiation leakage."
4. If the unit cannot be repaired on site, advise the customer not to use until unit is repaired.
5. Any serviceman who learns of any accident pertaining to microwave radiation leakage including the oven operating with open door should immediately notify the appropriate address listed below and Center for Devices and Radiological Health, DHHS.

IN U.S.A. Panasonic Services Company
(PASC) 50 Meadowland Parkway,
 Secaucus, New Jersey 07094
 Attention: Technical Service Division.
 (201)348-7000

IN PUERTO RICO PSC
(PSC) San Gabriel Industrial Park
 65th Infantry Ave. Km.9.5
 Carolina, Puerto Rico 00985
 (787)750-4300

IN CANADA Panasonic Canada Inc.
(PCI) 5770 Ambler Drive, Mississauga,
 Ontario, L4W2T3
 (905)624-5010

6. There are special components used in the microwave oven which are important for safety. These parts are marked with a  on the replacement parts list. It is essential that these critical parts be replaced only with the manufacture's specified parts to prevent microwave leakage, shock, fire, or other hazards. Do not modify the original design.

PRECAUTIONS TO BE OBSERVED BEFORE AND DURING SERVICING TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- | | |
|--|---|
| <p>(A) Do not operate or allow the oven to be operated with the door open.</p> <p>(B) Make the following safety checks on all ovens to be serviced before activating the magnetron or other microwave source, and make repairs as necessary:</p> <ul style="list-style-type: none">(1) Interlock operation(2) Proper door closing(3) Seal and sealing surfaces (arcing, wear, and other damage)(4) Damage to or loosening of hinges and latches.(5) Evidence of dropping or abuse <p>(C) Before turning on microwave power for any service test or</p> | <p>inspection within the microwave generating compartments, check the magnetron, waveguide or transmission line, and cavity for proper alignment, integrity and connections.</p> <p>(D) Any defective or misadjusted components in the interlock, monitor, door seal, and microwave generation and transmission systems shall be repaired, replaced, or adjusted by procedures described in this manual before the oven is released to the owner.</p> <p>(E) A microwave leakage check to verify compliance with the Federal Performance Standard should be performed on each oven prior to release to the owner.</p> |
|--|---|

CAUTION

About lead free solder (PbF)

Distinction of PbF PCB: PCBs (manufactured) using lead free solder will have a PbF stamp on the PCB.

Caution: ● Pb free solder has a higher melting point than standard solder; Typically the melting point is 50-70°F(30 - 40°C) higher. Please use a high temperature soldering iron. In case of the soldering iron with temperature control, please set it to 700± 20°F (370 ± 10°C).

● Pb free solder will tend to splash when heated too high (about 1100°F/600°C).

Panasonic®

DANGER OF HIGH VOLTAGE AND HIGH TEMPERATURE (HOT/LIVE) OF THE INVERTER POWER SUPPLY (U)

INVERTER WARNING

This Inverter board looks like a regular PCB. However, this PCB drives the magnetron tube with extremely high voltage and high current.

NEW H.V.

IT HAS: 1. Very high voltage and high current circuits.

It functions the same as the high voltage transformer and high voltage capacitor in ordinary microwave ovens.

2. Aluminum heat sink is energized with very high voltages and high heat energy.


3. Very high voltage may remain in circuitry even when oven is off. High voltage may remain in the capacitors on the board.

DO NOT:

- * 1. Do not touch circuitry because it has very hot (high voltage) circuitry. Even when replacing board, extreme care should be taken to avoid possible electric shock hazards. High voltage may remain in circuit.
- * 2. Do not touch aluminum heat sink because it is very hot in high voltage and also very hot in high heat energy.
- * 3. Do not try to adjust or tamper with preset volume on the Inverter board because it is very dangerous to adjust without proper test equipment.
- * 4. Do not test oven while Inverter grounding plate or screws are loose. It is very dangerous to operate H.V. Inverter Circuit (U) with loose mounting screws or if improperly grounded.
- * 5. For USA only:

Do not try to repair Inverter PCB because it is very dangerous to repair it. Replace as whole High Voltage Inverter Circuit unit and return fully re-packed with original shipping box and shipping materials.

INVERTER POWER SUPPLY

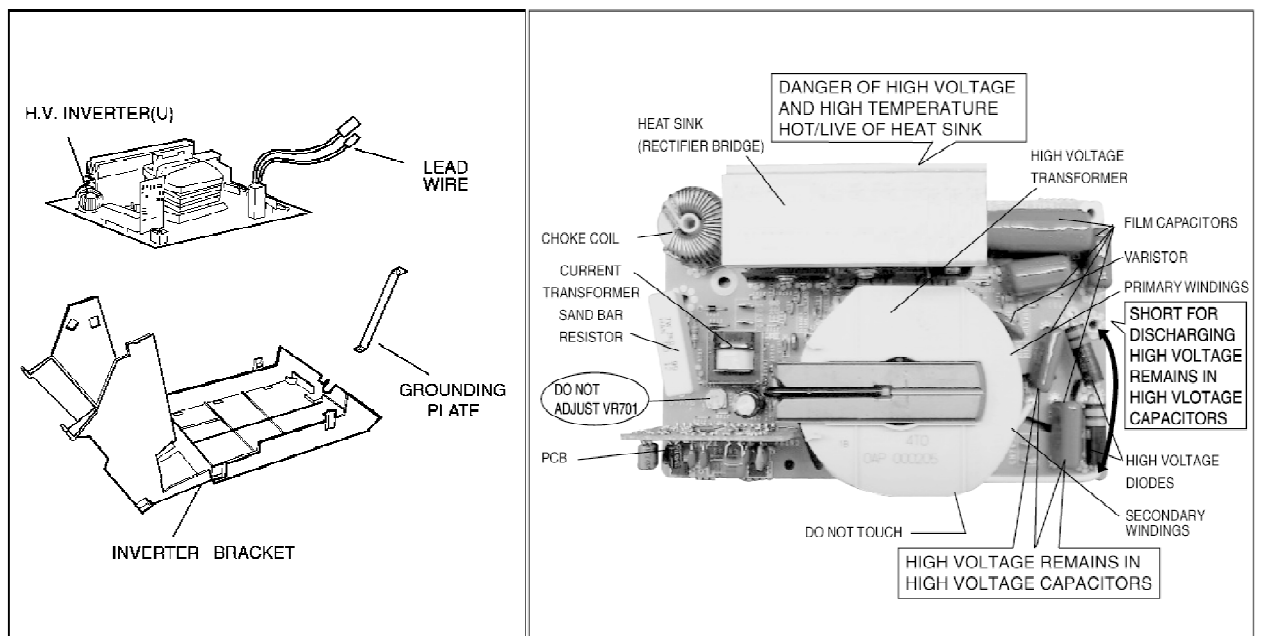


1. FEATURE CHART

FEATURE	MODEL	NN-S262	NN-S252
Five Stage Cooking		O	O
Inverter Turbo Defrost		O	O
Sensor Reheat		O	-
Sensor Cooking		O	-
Auto Reheat		-	O
Inverter Auto Cooking		-	O
Quick Min		O	O
Popcorn		O	O
Digital Clock		O	O
Timer		O	O
Child Safety Lock		O	O
Vent Fan		O	O
Cooktop Light		O	O

2. CONTROL PANEL (APH)

NN-S262

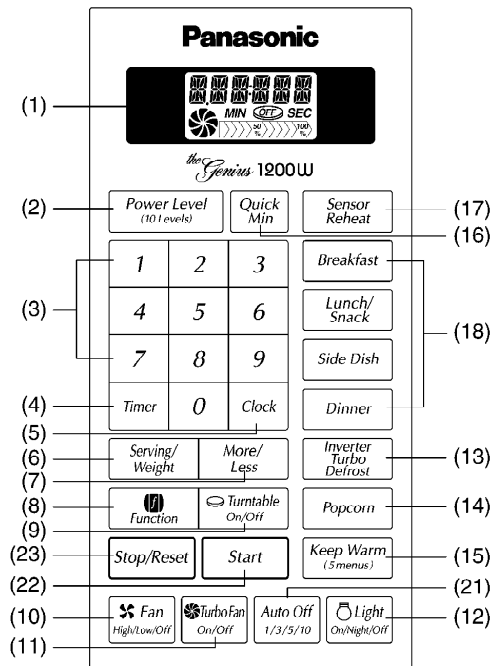

(1) Display Window

(2) Power Level Pad

(3) Number Pads

(4) Timer Pad

(5) Clock Pad

(6) Serving/Weight Pad

(7) More/Less Pad

(8) Function Pad

(9) Turntable On/Off Pad

(10) Fan High/Low/Off Pad

(11) Turbo Fan On/Off Pad

(12) Light On/Night/Off Pad

(13) Inverter Turbo Defrost Pad

(14) Popcorn Pad

(15) Keep Warm Pad

(16) Quick Min Pad


(17) Sensor Reheat Pad

(18) Sensor Cooking Pads

(19) Auto Reheat Pad

(20) Inverter Auto Cooking Pads

NN-S252

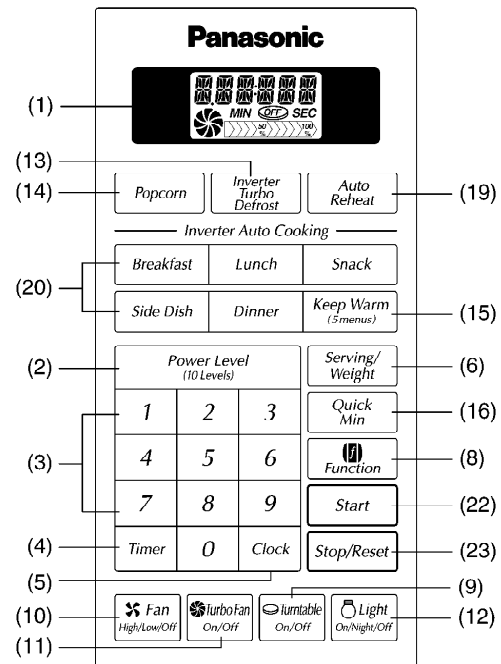

(21) Auto Off Pad

(22) Start Pad

One tap allows oven to begin functioning. If door is opened or STOP/RESET Pad is pressed once during oven operation, START Pad must again be pressed to restart oven.


(23) Stop/Reset Pad

Before cooking: One tap clears your instructions.

During cooking: One tap temporarily stops the cooking process. Another tap cancels all your instructions and time of day or colon appears on the display window.

3. CONTROL PANEL (CPH)


NN-S262

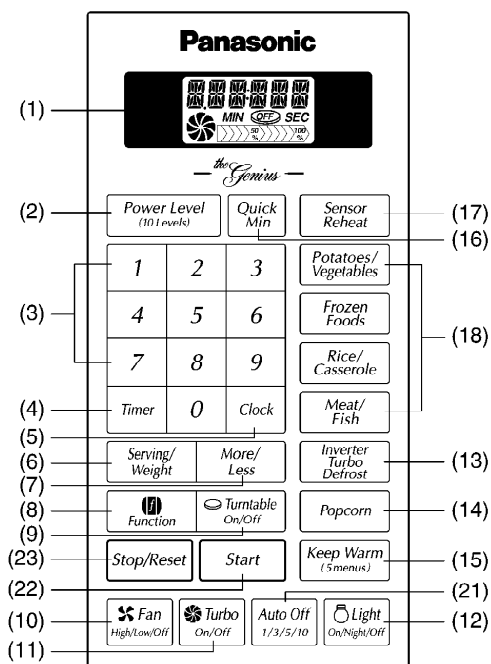

- (1) Display Window
- (2) Power Level Pad
- (3) Number Pads
- (4) Timer Pad
- (5) Clock Pad
- (6) Serving/Weight Pad
- (7) More/Less Pad
- (8) Function Pad
- (9) Turntable On/Off Pad
- (10) Fan High/Low/Off Pad

- (11) Turbo Fan On/Off Pad
- (12) Light On/Night/Off Pad
- (13) Inverter Turbo Defrost Pad
- (14) Popcorn Pad
- (15) Keep Warm Pad
- (16) Quick Min Pad
- (17) Sensor Reheat Pad
- (18) Sensor Cooking Pads
- (19) Auto Reheat Pad
- (20) Inverter Auto Cooking Pads

NN-S252

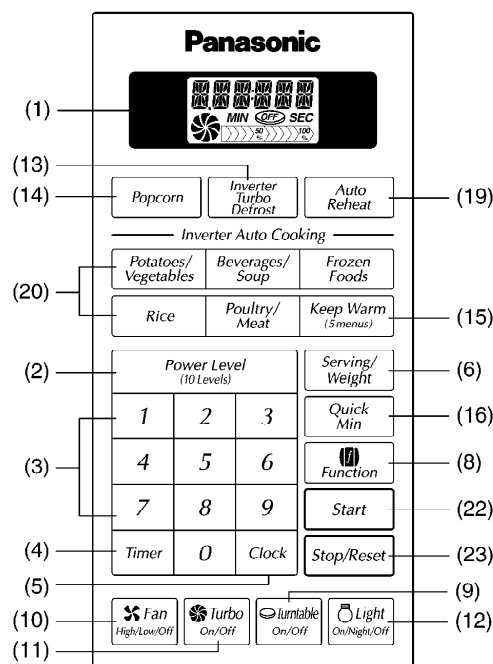

- (21) Auto Off Pad
- (22) Start Pad

One tap allows oven to begin functioning. If door is opened or STOP/RESET Pad is pressed once during oven operation, START Pad must again be pressed to restart oven.

(23) Stop/Reset Pad

Before cooking: One tap clears your instructions.

During cooking: One tap temporarily stops the cooking process. Another tap cancels all your instructions and time of day or colon appears on the display window.

4. OPERATION AND DIGITAL PROGRAMMER CIRCUIT TEST PROCEDURE

4.1. To set clock

OPERATION	SCROLL DISPLAY
1. Plug the power supply cord into wall outlet.	BEFORE USE REFER TO OPERATING INSTRUCTIONS
2. Press [Clock] pad.	 
3. Enter time of day (TOD) by pressing appropriate [Number] pads.	11  25
4. Press [Clock] pad. TOD has now been resistered into the digital programmer circuit and will count up by minutes.	11 : 25

4.2. Time cooking for two stage

OPERATION	SCROLL DISPLAY
1. Place a water load in the oven.	
2. Press [Power Level] pad once to set High power. (1st stage)	P 10
3. Set for 5 seconds by pressing [Number] pads. 5 sec.= [5]	5 SEC
4. Press [Power Level] pad 6 times to set Medium power. (2nd stage)	P 5
5. Set for 1 minute by pressing [Number] pads. 1 Min.= [1] [0] [0]	1 00 MIN SEC

OPERATION	SCROLL DISPLAY
6. Press [Start] pad.	5 SEC
7. When 1st stage cooking time has elapsed. Oven beeps twice and automatically switches to 2nd stage cooking.	1 00 MIN SEC
8. When 2nd stage cooking time has elapsed, oven beeps 5 times and shuts off.	Time of day or colon if set appears in the display

4.3. Inverter turbo defrost

OPERATION	SCROLL DISPLAY
1. Press [Inverter Turbo Defrost] Pad.	INVERTER TURBO DEFROST SET WEIGHT
2. Set the weight for 1 lb by pressing [Number] pads. 1 lb= [1] [0]	1.0 LB
3. Press [Start] pad.	5 28 MIN SEC
4. Press [Stop/Reset] Pad twice. Oven shuts off.	Time of day or colon if set appears in the display.

4.4. Inverter auto cooking

OPERATION	SCROLL DISPLAY
1. Press [Beverages] pad once.	BEVERAGES PRESS SERVING WEIGHT
2. Press [Serving/Weight] pad twice to select 2 cups	2 CUPS
3. Press [Start] pad.	3 45 MIN SEC
When cooking time has elapsed, Oven beeps 5 times and shuts off.	Time of day or colon if set appears in the display.

4.5. Popcorn

OPERATION	SCROLL DISPLAY
1. Press [Popcorn] pad once for 3.5 oz serving. (Select 3.5, 3.0, 2.85, 2.65, 1.75 oz)	POPCORN 3.5 OZ
2. Press [Start] pad.	3.5 OZ
When cooking time has elapsed, Oven beeps 5 times and shuts off.	Time of day or colon if set appears in the display.


4.6. Auto reheat

OPERATION	SCROLL DISPLAY
1. Press [Auto Reheat] pad twice for two servings.	AUTO REHEAT
2. Press [Start] pad. Auto Reheat cycle begins time counts down.	1 21 MIN SEC
3. When cooking time has elapsed, Oven beeps 5 times and shuts off.	Time of day or colon if set appears in the display.


4.7. Power level

Press Power Level	Power Level	Display Window
once	P10 (HIGH)	P10
twice	P9	P9
3 times	P8	P8
4 times	P7 (MED.HIGH)	P7
5 times	P6 (MEDIUM)	P6
6 times	P5	P5
7 times	P4	P4
8 times	P3 (MEDIUM-LOW)	P3
9 times	P2	P2
10 times	P1 (LOW)	P1

5. SCHEMATIC DIAGRAM (APH)

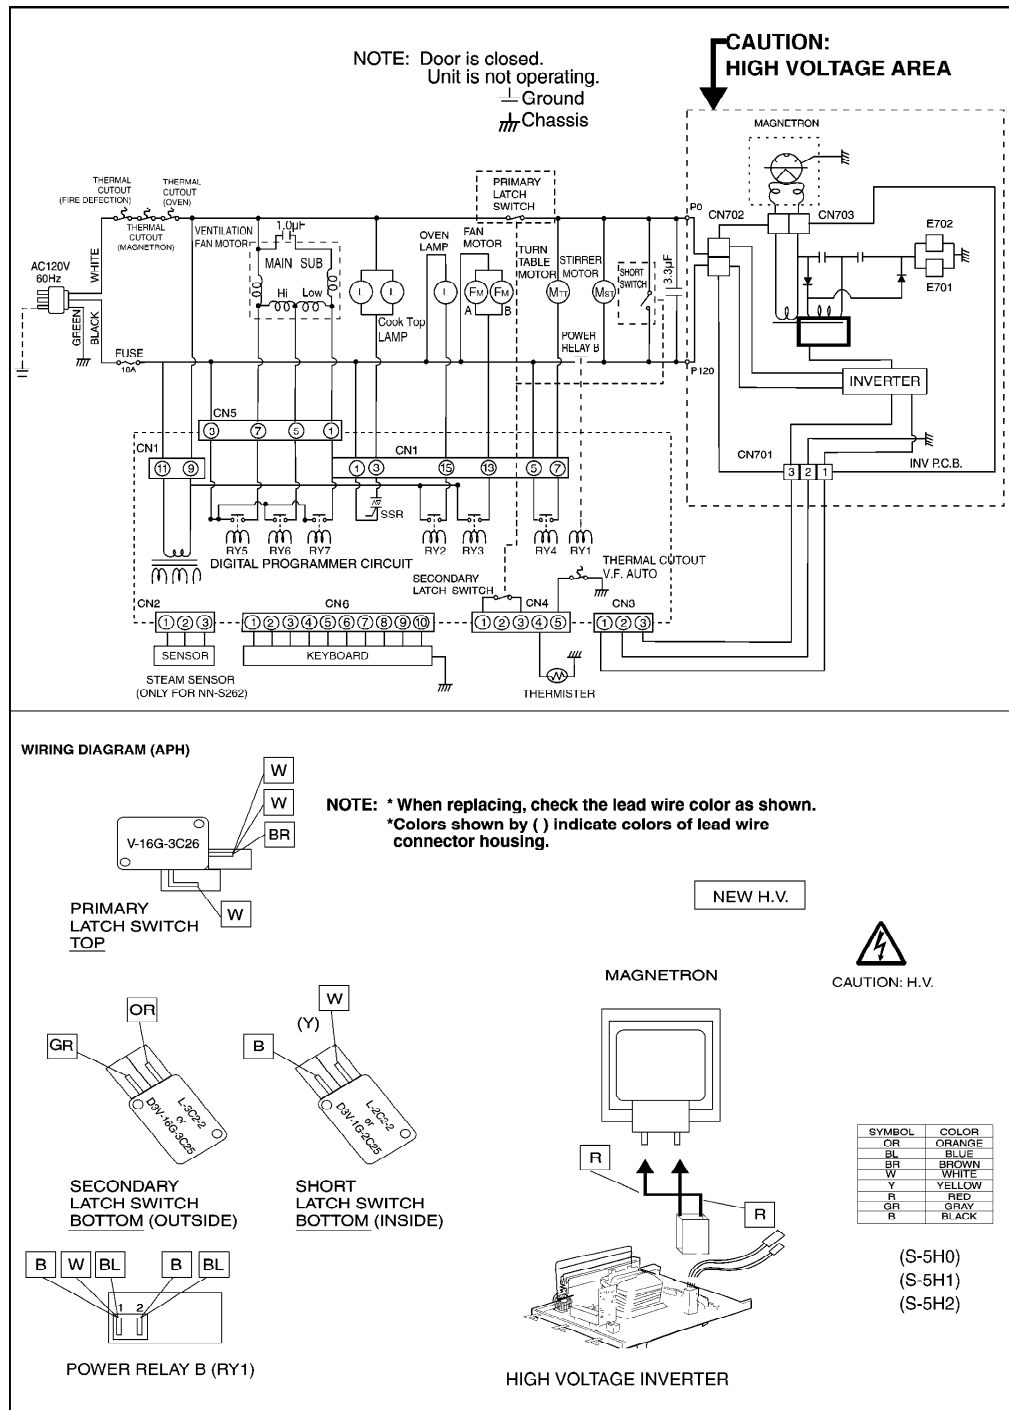

6. SCHEMATIC DIAGRAM (CPH)

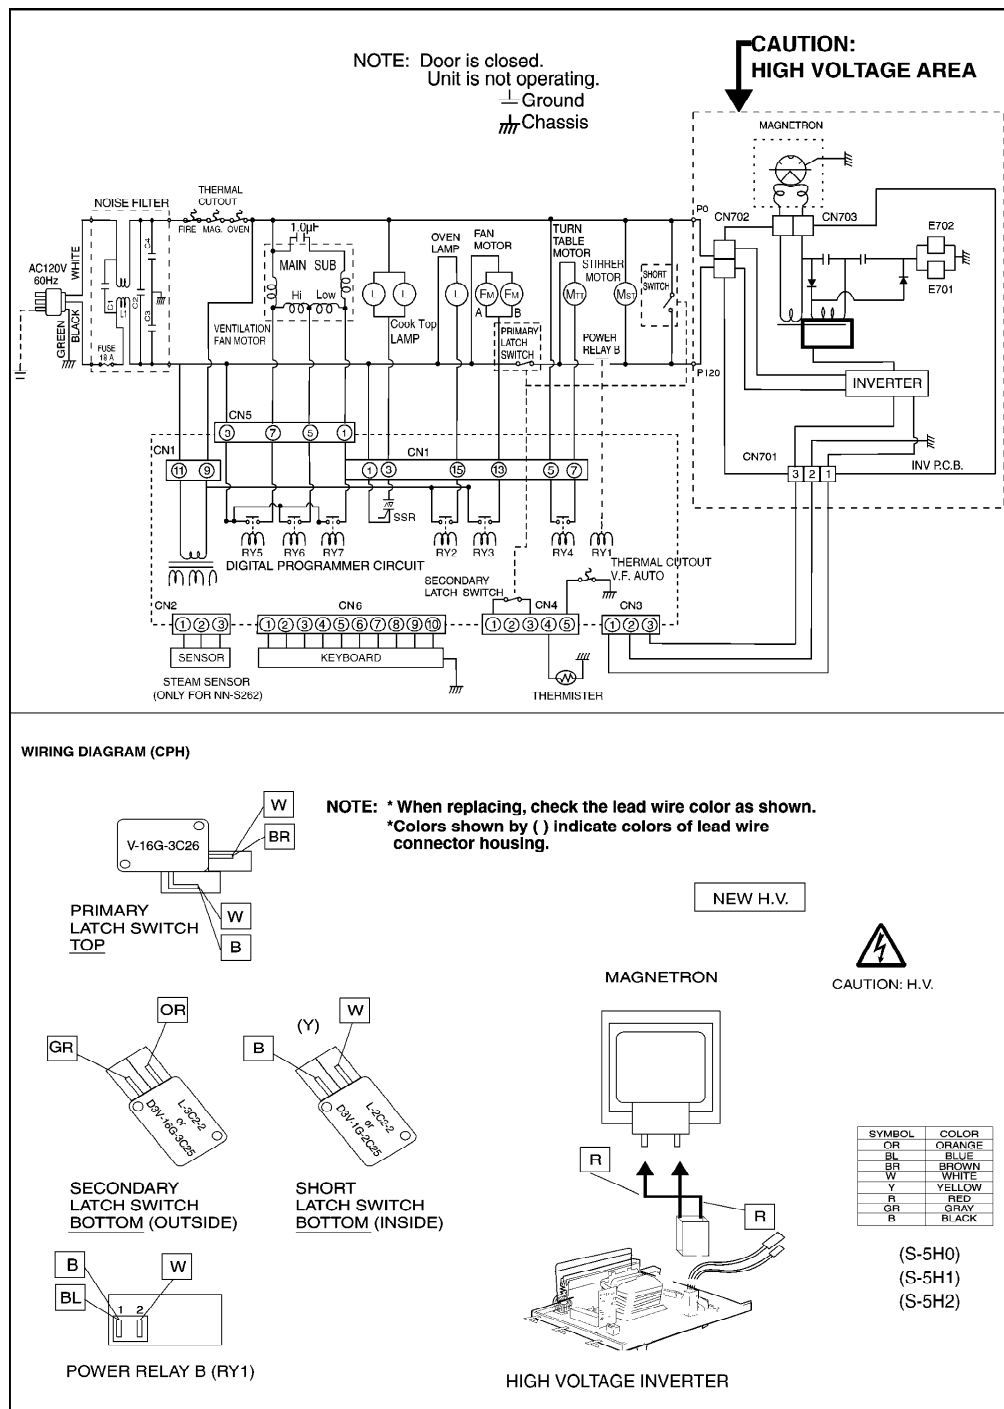

7. DESCRIPTION OF OPERATING SEQUENCE

7.1. Variable power cooking control

High Voltage Inverter Power supply (U) controls output power by the signal from Digital Programmer Circuit (DPC). Power relay stays ON for P4 to P10 and For P1 to P3, both inverter drive signal and power relay to control output power.

NOTE:

The ON/OFF time ratio does not correspond with the percentage of microwave power since

approximately 2 seconds are required for heating of magnetron filament.

Variable Power Cooking

POWERSETTING		OUTPUT POWER(%) APPROX.	ON-OFF TIME OF POWER RELAY B (RY1)	
			ON(SEC)	OFF(SEC)
HIGH	P10	100%	22	0
	P9	90%	22	0
	P8	80%	22	0
MEDIUM-HIGH	P7	70%	22	0
	P6	60%	22	0
	P5	50%	22	0
MEDIUM-LOW	P4	40%	22	0
	P3	30%	17	5
	P2	20%	11	11
DEFROST	P1	10%	6	16
	P3	30%	17	5

7.2. Inverter power supply circuit [NEW H.V.]

This Inverter Power Supply Circuit supplies 4,000V DC to the magnetron tube from the line voltage, 120V 60Hz AC input. functions as the H.V. transformer, the H.V.capacitor and H.V.Diode.

1. The AC input voltage 120V 60Hz is rectified to DC voltage immediately.
2. DC voltage will be supplied to the switching devices called IGBT. These devices will be switched ON-OFF by the 20 to 40 kHz PWM. (pulse width modulation) signal from the microcomputer in the DPC.
3. This drives the High voltage transformer to increase up to 2,000V AC and approximately 3V AC by means of transformer.
4. Then the half-wave doubler voltage rectifier circuit, consisting of the H.V. diodes and Capacitors, generates the necessary 4,000V DC needed for the magnetron.
5. Output power of the magnetron tube is always monitored by the signal output from the current transformer built into the inverter circuit.

6. Then this signal will be fed back to the microcomputer in the DPC to determine operating conditions and output necessary to control PWM signal to the Inverter Power Supply to control output power.

7.3. Inverter turbo defrost

When this Auto Control feature is selected and the Start Pad is tapped:

1. The digital programmer circuit determines the power level and cooking time to complete cooking and indicates the operating state in the display window. Table shows the corresponding cooking times for respective serving by categories.
2. When cooking time the display window has elapsed, the oven turns off automatically by a control signal from the digital programmer circuit.

Inverter Turbo Defrost

WEIGHT SELECTED	COOKING TIME
1.0LB	5 min.28 sec.

8. CAUTIONS TO BE OBSERVED WHEN TROUBLESHOOTING

Unlike many other appliances, the microwave oven is high-voltage, high-current equipment. Though it is free from danger in ordinary use, extreme care should be taken during repair.

CAUTION

Servicemen should remove their watches whenever working close to or replacing the magnetron.

8.1. Check the grounding

Do not operate on a 2-wire extension cord. The microwave oven is designed to be used when grounded. When it is inoperative, make sure it is grounded properly before beginning repair work.

8.2. Inverter warnings [NEW H.V.]

**DANGER OF HIGH VOLTAGE AND HIGH /
TEMPERATURE (HOT/LIVE) OF THE INVERTER /
POWER SUPPLY (U)**

This High Voltage Inverter Power Supply circuit supplies very high voltage and very high current for the magnetron tube. Though it is free from danger in ordinary use, extreme care should be taken during repair. As you can see, it looks like a TV flyback transformer, however the current is extremely large and so danger exists because of its high current and high voltages.

The aluminum heat sink is also energized with high voltage (HOT), so do not touch when AC input terminal is connected to the power line because one of the IGBT switching power devices (Collector) is directly connected to the Aluminum heat sink.

The Aluminum heat sink may be HOT from heat energy; therefore, extreme care should be taken during servicing and replacing.

**WARNING OF INVERTER POWER SUPPLY (U) /
GROUNDING**

Check the High Voltage Inverter Power Supply circuit grounding. This High Voltage Inverter Power Supply circuit board must have a proper chassis ground by the grounding bracket to the chassis ground; otherwise, this H.V. Inverter circuit board will expose very high voltage and cause extreme DANGER! Be sure to have proper grounding by the grounding plate and screws.

WARNING OF DISCHARGING HIGH VOLTAGE CAPACITORS

Warning about the electric charge in the high voltage capacitors. For about 30 seconds after the oven is turned off, an electric charge remains in the high voltage capacitors in the inverter power supply circuit board.

When replacing or checking parts, remove the power plug from the outlet and short the Inverter output terminal of the magnetron filament terminals to the chassis ground with an insulated handle screwdriver to discharge. Please make sure to touch chassis ground side first then short to the output terminals.

WARNING

There is high-voltage present, with high-current capabilities in the circuits of the primary, and secondary windings, choke coil and heat sink of the Inverter. It is extremely dangerous to work on or near these circuits with oven energized.

DO NOT measure the voltage in the high voltage circuit including filament voltage of magnetron.

WARNING

Never touch any circuit wiring with your hand nor with an insulated tool during operation.

8.3. When parts must be replaced, remove the power plug from the outlet.

8.4. When the 18 Amp fuse is blown due to the operation of short switch:

WARNING

When the 18 Amp. fuse is blown due to the operation of short switch, you must replace Primary latch switch and short switch. Also replace power relay B (RY1) when the continuity check reads shorted contacts (1-2).

1. This is mandatory. Refer to "Measurements and Adjustments" for



these switches.

2. When replacing the fuse, confirm that it has the appropriate rating for these models.
3. When replacing faulty switches, be sure mounting tabs are not bent, broken or otherwise deficient in their ability to hold the switches.

8.5. Avoid inserting nails, wire, etc. through any holes in the unit during operation.

WARNING

Never insert a wire, nail or any other metal object through the lamp holes on the cavity or any other holes or gaps, because such objects may work as an antenna and cause microwave leakage.

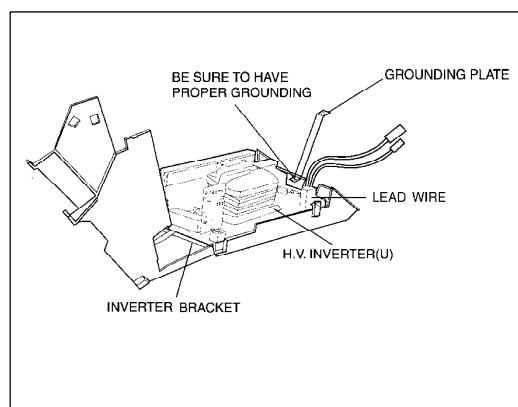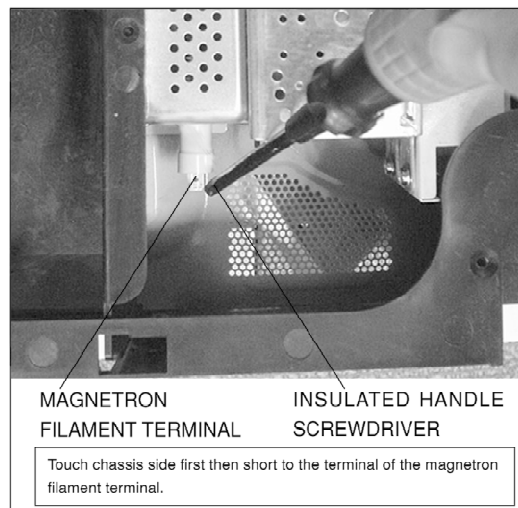

8.6. Confirm after repair

1. After repair or replacement of parts, make sure that the screws of the oven, etc. are neither loose nor missing. / Microwaves might leak if screws are not properly tightened.
2. Make sure that all electrical connections are tight before inserting the plug into the wall outlet.
3. Check for microwave energy leakage. (Refer to procedure for measuring microwave energy leakage.)

CAUTION / MICROWAVE RADIATION

DO NOT BECOME EXPOSED TO RADIATION FROM THE MICROWAVE GENERATOR OR OTHER PARTS CONDUCTING MICROWAVE ENERGY.

IMPORTANT NOTICE [NEW H.V.]

1.The following components have potentials above 2000V while the appliance is operated.

- * Magnetron
- * High voltage transformer
- * High voltage diode
- * High voltage capacitor

Pay special attention to these components.

2.When the appliance is operated with the door hinge or magnetron fixed incorrectly, the microwave leakage can reach more than 5mW/cm². After repair or exchange, it is very important to check if magnetron and the door hinge is correctly fixed.

9. DISASSEMBLY AND PARTS REPLACEMENT PROCEDURE

9.1. Magnetron

1. Discharge the high voltage capacitor.
2. Disconnect 2 connectors from fan motor B.
3. Remove 4 screws holding fan motor B (U) assembly.
4. Remove 3 screws which holding exhaust guide (U) onto oven.
5. Tilt exhaust guide (U).
6. Remove 1 screw holding air guide A and then remove air guide A.

7. Remove 2 high voltage lead wires from magnetron filament terminal.
8. Remove 4 screws holding magnetron.

NOTE:

After replacing the magnetron, tighten mounting screws properly making sure there is no gap between the waveguide and the magnetron to prevent microwave leakage.

CAUTION

When replacing the magnetron, be sure the antenna gasket is in place.

9.2. Digital programmer circuit (DPC) and membrane key board.

NOTE:


Be sure to ground any static electric charge built up on your body before handling the DPC.

1. Disconnect all connectors from D.P.C.
2. Remove 2 screws holding escutcheon base and slide the escutcheon base upward slightly.
3. Release CN6 connector's lock of D.P.C by pushing both levels to inside and pull them upward, and remove flat cable of membrane keyboard.
4. Remove 3 screws holding D.P.C.
To replace membrane key board
5. Push the upper part of key board (display window portion) from back of escutcheon base and peel off escutcheon sheet and membrane key board completely from escutcheon base.

NOTE:

1. The membrane key board is attached to the escutcheon base with double faced adhesive tape. Therefore, applying hot air such as using a hair dryer is recommended for smoother removal. / 2. When installing new membrane key board, make sure that the surface of escutcheon base is cleaned sufficiently so that any problems (shorted contacts or uneven surface) can be avoided. / 3. Alignment position of membrane key board is as follows; /

Membrane key board: Right and upper edges / Escutcheon sheet: Right and upper edges

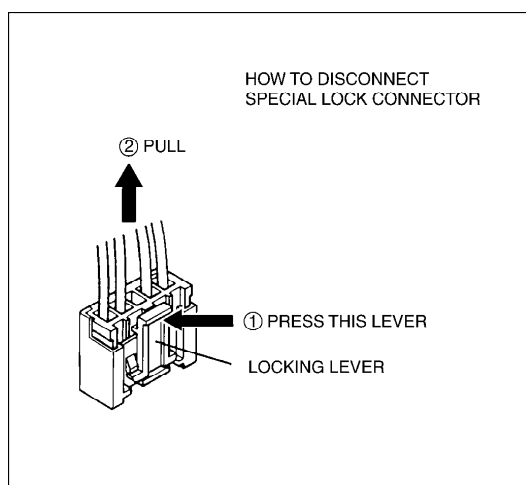

9.3. Low voltage transformer and/or power relays (RY1, RY2)

NOTE:


Be sure to ground any static electric charge built up on your body before handling the DPC.

(A) Using solder wick or a desoldering tool and 30W soldering iron, carefully remove all solder from the terminal pins of the low voltage transformer and/or power relays.

NOTE:

Do not use a soldering iron or desoldering tool of more than 30 watts on DPC contacts.

(B) With all the terminal pins cleaned and separated from DPC contacts, remove the defective transformer/power relays making sure all terminal pins are inserted completely. Resolder all terminal contacts carefully.

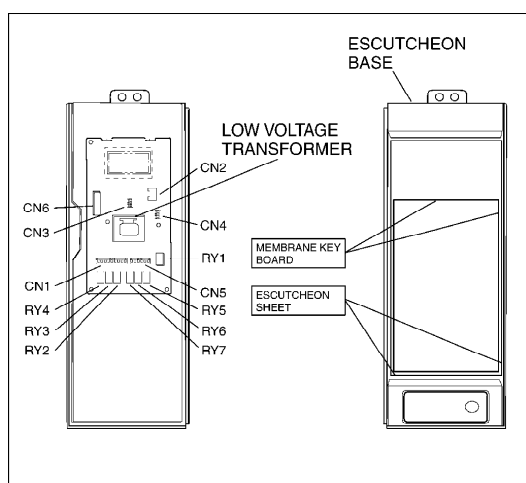




9.4. Inverter power supply (U)

**CAUTIONS WHILE REPLACING INVERTER /
POWER SUPPLY (U)**

1. Make sure to leave the grounding plate in its place.
2. Make sure to securely tighten grounding screw from the bottom of chassis (base).
3. Securely connect 3 lead wire connectors.
4. Make sure the heat sink has enough space (gap) from the oven. Take special care not to touch any lead wire to the aluminum heat sink because it is hot.

1. Remove 1 screw holding orifice on the cover plate.
2. Remove 1 screw holding top front cover on the oven.
3. Remove 1 screw holding Inverter grounding plate on the oven.
4. Remove 3 screws holding Inverter bracket on top front cover.
5. Slide 2 locking of Inverter bracket at the top front cover slightly.
6. Disconnect 2 lead wires from fan motor A terminals.
7. Remove 1 screw holding orifice on the Inverter bracket.
8. Release 2 tabs to make Inverter bracket flat, and then remove orifice.
9. Release 2 tabs on the Inverter bracket and make flat.
10. Unplug 3 connector on H.V. Inverter (U).
11. Remove 3 screws holding H.V. Inverter (U) onto Inverter bracket.
12. Remove 1 screw holding grounding Plate on the H.V. Inverter (U).

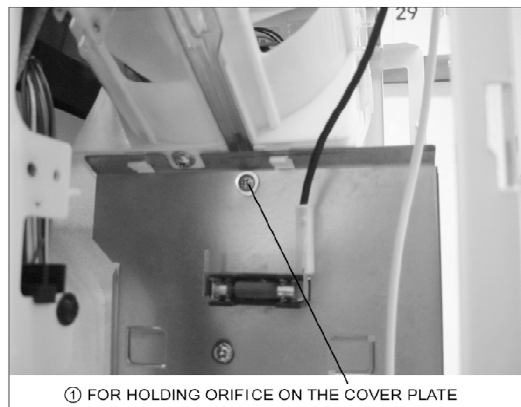

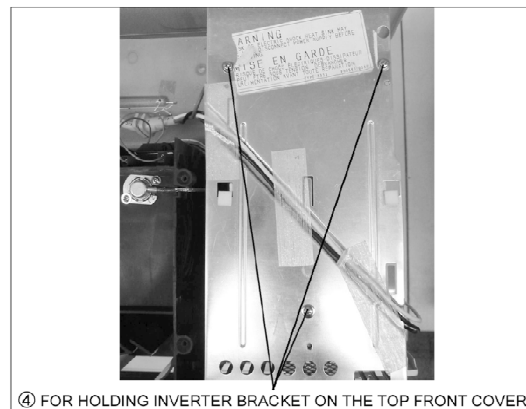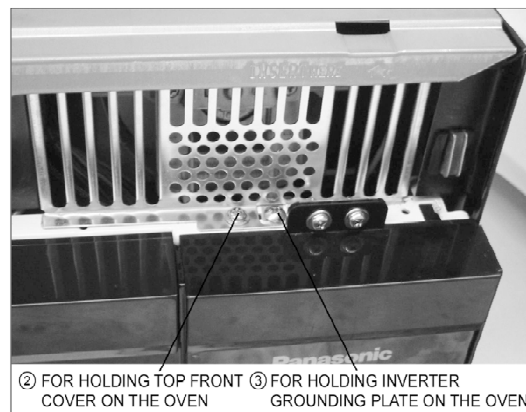

9.5. Door assembly

1. Remove door C from door E by carefully pulling outward starting from upper right hand corner using a flat blade screwdriver.
2. Separate door E from tabs on door A and remove door A.
3. Remove door screen B from door A.
4. Remove door key and door key spring.
5. Open Door E at the opening angle of approximately 10°(Note: The door cannot be removed if the opening angle is greater than 10°).
6. Remove the door E from its hinges by pushing the door E's bottom upward and out.
7. Replace other components.


NOTE:

Door alignment is critical. If door is misaligned, apply pressure until alignment is achieved.

NOTE:

After replacement of the defective component parts of the door,

reassemble, install, and perform microwave leakage test.

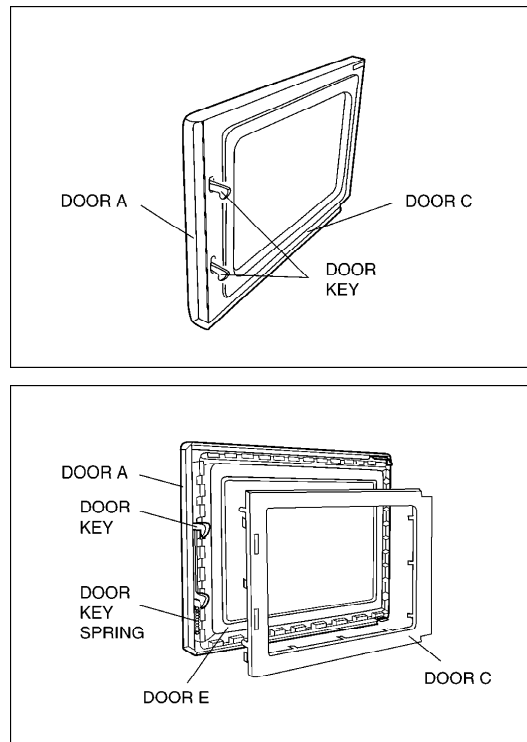


9.6. Stirrer motor

- 1. Release 1 canoe clip on the cover and then remove the cover.**
- 2. Pull out stirrer.**
- 3. Remove 3 screws which holding exhaust guide A on the oven.**
- 4. Tilt exhaust guide A.**
- 5. Disconnect 2 connectors from stirrer motor.**
- 6. Remove 1 screw holding stirrer motor.**
- 7. Release from retainer tab by turn spinning certain angle, remove stirrer motor.**

9.7. Blower motor (U)

- 1. Disconnect 1 connector from blower motor (U).**
- 2. Remove 2 screws which holding blower motor (U) on the oven.**
- 3. Remove blower motor (U).**

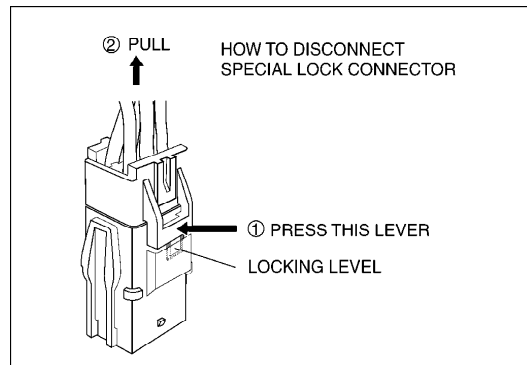


9.8. Fan motor A (for H.V. inverter (U) cooling)

Disassembly procedure step 1~8 same as above H.V. Inverter (U).

9. Pull out fan blade.

10. Remove 2 screws which holding fan motor A on the orifice, and remove fan motor A.

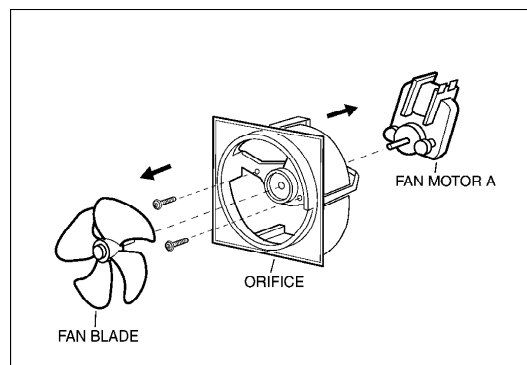


9.9. Fan motor B (for magnetron cooling)


1. Disconnect 2 lead wires from fan motor B terminals.

2. Remove 4 screws holding fan motor B(U) Assembly.

3. Remove 4 screws which holding fan case installation plate on the fan case C.


4. From interior of fan case C, remove 2 screws holding fan motor B.

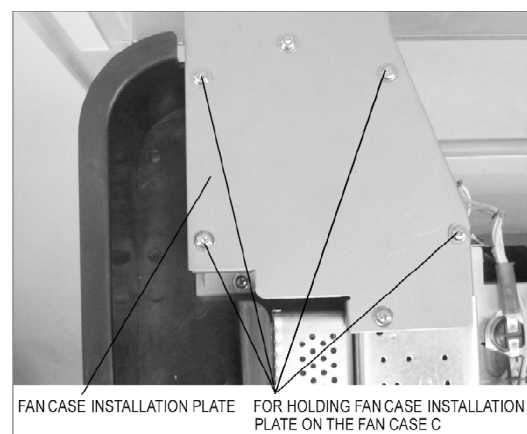

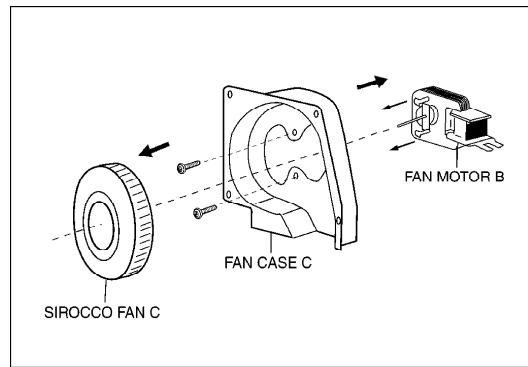

9.10. Turntable motor

1. Disconnect 2 lead wires from turntable motor terminals.
2. Remove 1 screw holding turntable motor.
3. Release from retainer tab by turn spinning certain angle, remove turntable.

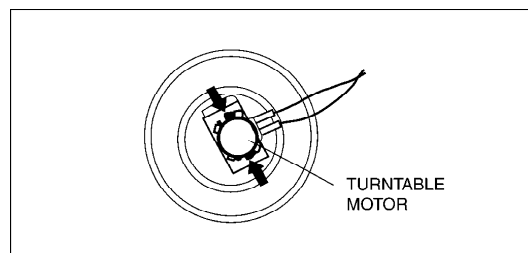

10. COMPONENT TEST PROCEDURE

CAUTION [NEW. H.V.]

1. High voltage is present at the high voltage terminal of the High Voltage Inverter (U) including aluminum heat sink during any cook cycle.
2. It is neither necessary nor advisable to attempt measurement of the high voltage.
3. Before touching any oven components, or wiring, always unplug the oven from its power source and discharge the high voltage capacitors.

10.1. Primary latch switch, secondary (secondary latch switch and power relay B) interlocks.

1. Unplug the lead connectors to Power Relay B and verify continuity of the power relay B 1-2 terminals.
2. Unplug lead connectors to Primary Latch Switch and Secondary Latch Switch.

3. Test the continuity of switches at door opened and closed positions with ohm meter (low scale). / Normal continuity readings should be as follows.

	Door Closed	Door Opened
Primary Latch Switch	0 Ω (close)	∞ Ω (open)
Secondary Latch Switch	0 Ω (close)	∞ Ω (open)
Power Relay B	∞ Ω (open)	∞ Ω (open)

10.2. Short switch & monitor


1. Unplug lead wires from Inverter Power Supply (U) primary terminals.
2. Connect test probes of ohm meter to the disconnected leads which were connected to Inverter Power Supply (U).
3. Test the continuity of short switch with door opened and closed positions using lowest scale of the ohm meter. / Normal continuity readings should be as follows.

Door Opened	Door Closed
0 Ω	∞ Ω

10.3. Magnetron

Continuity checks can only indicate an open filament or a shorted magnetron. To diagnose for an open filament or shorted magnetron.

1. Isolate magnetron from the circuit by disconnecting the leads.
2. A continuity check across magnetron filament terminals should indicate one ohm or less.
3. A continuity check between each filament terminal and magnetron case should read open.

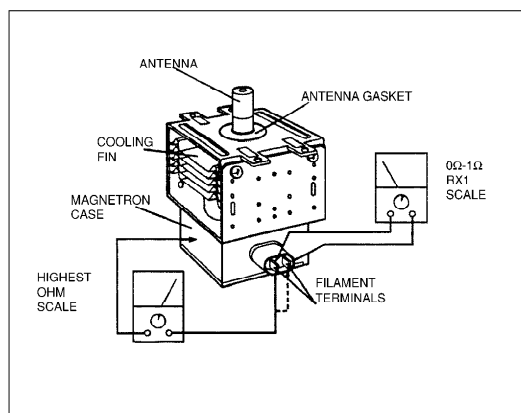


10.4. Membrane key board (Membrane switch assembly)

Check continuity between switch terminals, by tapping an appropriate pad on the key board.

The contacts assignment of the respective pads on the key board is as shown in digital programmer circuit.

10.5. Inverter power supply (U)

DO NOT try to REPAIR this H.V. Inverter power supply (U). Replace as whole H.V. Inverter(U) Unit.

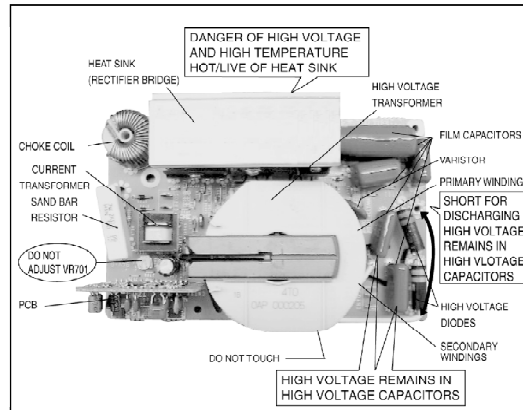

DANGER HIGH VOLTAGE

Test if failure codes of H97 or H98 appears by doing the following procedure. It is recommended to use an AC line input current Ampere meter for testing.

Test1

1. Program DPC.
 - A. Tap Clock
 - B. Tap Timer
 - C. Tap Start
 - D. Tap Power Level
2. Place 1 liter of water load into oven cavity.
3. Unplug 2 pin H.V. lead wire connector CN703 from magnetron tube.
4. Program oven at High power for 1 minute and press start.
 - A. After approximately 23 seconds, oven stops.
 - B. During oven operation, input current is approximately 0.5 to 1A.

If both a and b are OK, please proceed to test 2.

	INPUT AMPERE	FAILURE CODE
Unplug CN703	0.5 to 1A	Oven stops in 23 seconds after started.

Test2

Continued from Test 1

1. Unplug 3 pin connector CN701, CN703 remains unplug.
2. Set oven at High power for 1 minute and start.
 - A. After approximately 3 seconds, oven stops.
 - B. During oven operation, input current is approximately less than 0.4A.

	INPUT AMPERE	FAILURE CODE
Unplug CN701	<0.4A	Oven stops in 3 seconds after started.

If both a and b are OK, the Inverter Power Supply (U) can be determined OK.

11. MEASUREMENTS AND ADJUSTMENTS

WARNING

- For continued protection against radiation hazard, replace only with identical replacement parts (For touch models Part No. A 6142 - F60, Type No. V-16G-3C26 for Primary latch switch; Part No. A61425180AP, Type No. L-3C2-2 for Secondary latch switch and Part No. A61785180AP, Type No. L-2C2-2 for short switch.)
- When the 18 Amp fuse is blown due to the operation of the short switch, you must replace power relay B. Primary latch switch and the short switch. Then follow the installation procedures below.
- Interlock switch replacement In replacing faulty switches, be sure mounting tabs are not bent, broken or otherwise deficient in their ability to hold the switches.
- Refer to schematic diagram to ensure proper connection.

11.1. Adjustment of primary latch switch, secondary latch switch and short switch.

1. When mounting Primary latch switch, Secondary latch switch and short switch to door hook assembly, mount the Primary latch switch, the Secondary latch switch and the short switch to the door hook assembly as shown in table.


NOTE:

No specific adjustment during installation of Primary latch switch, Secondary latch switch and short switch to the door hook is necessary.

2. When mounting the door hook assembly to the oven assembly, adjust the door hook assembly by moving it in the direction of

arrow in the illustration so that the oven door will not have any play in it. Check for play in the door by pulling the door assembly. Make sure that the latch keys move smoothly after adjustment is completed. Completely tighten the screws holding the door hook assembly to the oven assembly.

3. Reconnect the short switch and check the continuity of the monitor circuit and all latch switches again by following the components test procedures.

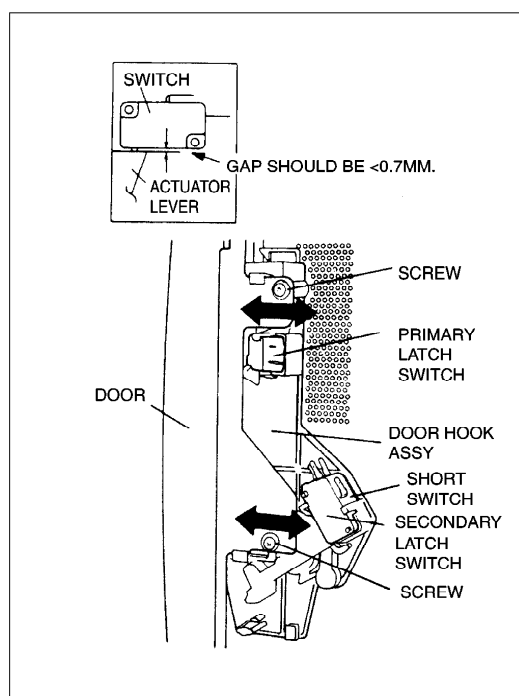

11.2. Measurement of microwave output

The output power of the magnetron can be determined by performing IEC standard test procedures. However, due to the complexity of IEC test procedures, it is recommended to test the magnetron using the simple method outlined below.

Necessary Equipment:

*1 liter beaker *Glass thermometer / *Wrist watch or stopwatch

NOTE:

Check the line voltage under load. Low voltage will lower the magnetron output. Take the temperature readings and heating time as accurately as possible.

1. Fill the beaker with exactly one liter of tap water. Stir the water using the thermometer and record the beaker's temperature. (recorded as T1).

2. Place the beaker on the center of glass cook plate. / Set the oven for High power and heat it for exactly one minute.
3. Stir the water again and read the temperature of the beaker. (recorded as T2).
4. The normal temperature rise at High power position for each model is as shown in table.

TABLE (1L-1min.test)

RATED OUTPUT	TEMPERATURE RISE
1100W(IEC705-88)	Min. 16.9°F(9.4°C)
1200W(IEC705-88)	Min. 18.5°F(10.3°C)

12. PROCEDURE FOR MEASURING MICROWAVE ENERGY LEAKAGE

WARNING

Check for radiation leakage after every servicing. Should the leakage be more than 2 mW/cm² (1mW/cm² for Canada) inform PASC, PSC, or PCI immediately. After repairing or replacing any radiation safety device, keep a written record for future reference, as required by D.H.H.S. and Health and Welfare Canada regulation. This requirement must be strictly observed. In addition, the leakage reading must be recorded on the service repair ticket while in the customer's home.

NOTE:

The U.S. Government standard is 5 mW/cm² while in the customer's home. 2mW/cm² stated here is our own voluntary standard. (1mW/cm² for Canada)

12.1. Equipment

- Electromagnetic radiation monitor
- Glass thermometer 212°F or 100°C
- 600cc glass beaker

12.2. Procedure for measuring radiation leakage

Note before measuring.

- Do not exceed meter full scale deflection. Leakage monitor should initially be set to the highest scale.

- To prevent false readings the test probe should be held by the grip portion of the handle only and moved along the shaded area in Figure no faster than 1 inch/sec (2.5cm/sec).
 - Leakage with the outer panel removed less than 5mW/cm₂.
 - Leakage for a fully assembled oven with door normally closed less than 2mW/cm₂ (1mW/cm₂ for Canada).
 - Leakage for a fully assembled oven [Before the latch switch (primary) is interrupted] while pulling the door less than 2mW/cm₂.
1. Pour 275 ± 15cc (9ozs ± 1/2oz) of 20°C ± 5°C (68° ± 9°F) water in a beaker which is graduated to 600cc, and place in the center of the oven.
 2. Set the radiation monitor to 2450MHz and use it following the manufacturer's recommended test procedure to assure correct results.
 3. When measuring the leakage, always use the 2 inch (5cm) spacer supplied with the probe.
 4. Tap the start pad or set the timer and with the magnetron oscillating, measure the leakage by holding the probe perpendicular to the surface being measured.

12.2.1. Measurement with the outer panel removed.

Whenever you replace the magnetron, measure for radiation leakage before the outer panel is installed and after all necessary components are replaced or adjusted. Special care should be taken in measuring around the magnetron.

WARNING

Avoid contacting any high voltage parts.

12.2.2. Measurements with a fully assembled oven.

After all components, including outer panel are fully assembled, measure for radiation leakage around the door periphery, the door viewing window, the exhaust opening and air inlet openings.

12.3. Record keeping and notification after measurement


- After any adjustment or repair to a microwave oven, a leakage reading must be taken. Record this leakage reading on the repair ticket even if it is zero.

A copy of this repair ticket and the microwave leakage reading

should be kept by repair facility.

- Should the radiation leakage be more than 2 mW/cm² (1mW/cm for Canada) after determining that all parts are in good condition, functioning properly, and genuine replacement parts as listed in this manual have been used, immediately notify PASC, PSC or PCI.

12.4. At least once a year, have the radiation monitor checked for calibration by its manufacturer.

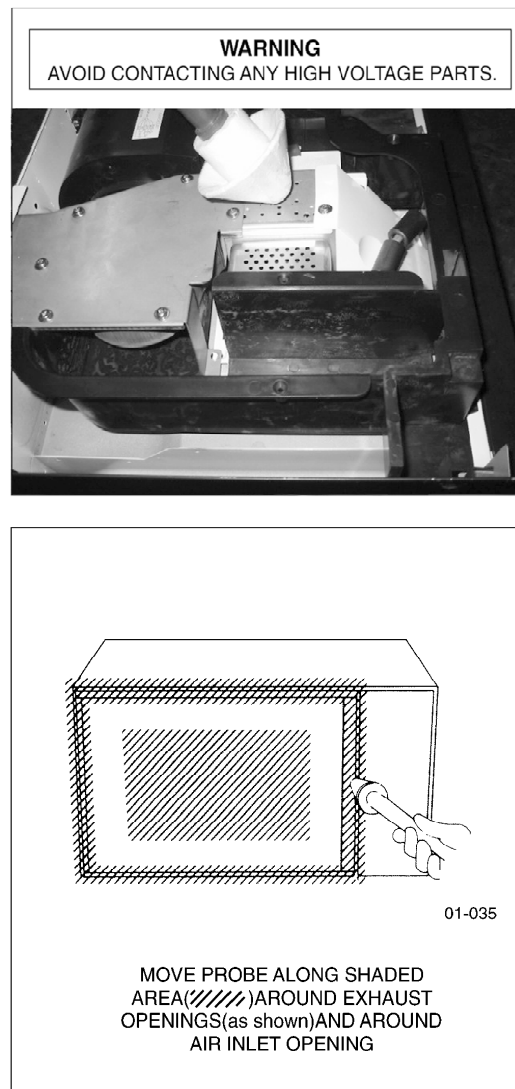

13. TROUBLESHOOTING GUIDE

CAUTION

1. Check grounding before checking for trouble.
2. Be careful of high voltage circuit.
3. Discharge high voltage capacitor.
4. When checking the continuity of the switches or the high voltage transformer, disconnect one lead from these parts and then check continuity with the AC plug removed. To do otherwise may result in a false reading or damage to your meter. / When disconnecting a plastic connector from a terminal, must hold the plastic connector instead of the lead wire and then disconnect it, otherwise lead wire may be damaged or the connector cannot be removed.
5. Do not touch any parts of the circuitry on the digital programmer circuit, since static electric discharge may damage this control panel. / Always touch yourself to ground while working on this panel to discharge any static charge in your body.
6. 120V AC is present on the digital programmer circuit (Terminals of power relay's and primary circuit of low voltage transformer). When troubleshooting, be cautious of possible electrical shock hazard.

First of all operate the microwave oven following the correct operating procedures in order to find the exact cause of any trouble.

	SYMPTOM	CAUSE	CORRECTION:
1.	Oven is dead. Fuse is OK. No display and no operation at all.	1. Open or loose lead wire harness Open thermal cutout (Magnetron) 2. Open low voltage transformer Defective DPC 3. 4.	Check fan motor when thermal cutout is defective.
2.	No display and no operation at all. / Fuse is blown.	1. Shorted lead wire harness Defective primary latch switch 2. (NOTE 1) 3. Defective short switch (NOTE 1) 4. Defective Inverter Power Supply (U) Refer to component test procedure	Check adjustment of primary and secondary latch switch and door latch switch including door. Refer to Inverter PCB Troubleshooting.
		NOTE 1: All of these switches must be replaced at the same time. Check continuity of power relay B (RY-1)'s contacts (between primary and secondary) and if it has continuity, replace power relay B (RY-1) also.	
3.	Oven does not accept key input(Program)	1. Key input is not in sequence Open or loose connection of 2. membrane key pad to DPC (Flat cable) 3. Shorted or open membrane key board 4. Defective DPC	Refer to operation procedure Refer to DPC troubleshooting
4.	Fan motor turn on when oven is plugged in with door closed.	3. Misadjustment or loose wiring of secondary latch switch 4. Defective secondary latch switch	Adjust door and latch switch

	SYMPTOM	CAUSE	CORRECTION:
5.	Timer starts count down but no microwave oscillation. (No heat while oven lamp and fan motor turn on)	1. Off-alignment of latch switches Open or loose connection of high voltage circuit especially magnetron filament circuit 2. voltage circuit especially magnetron filament circuit NOTE: Large contact resistance will bring lower magnetron filament voltage and causing magnetron to lower output and/or be intermittent. 3. Defective high voltage component H.V. Inverter Power Supply (u) Magnetron 4. Open or loose wiring of power relay B (RY-1) 5. Defective primary latch switch 6. Defective DPC or power relay B (RY-1)	Adjust door and latch sv Check high voltage com according to component procedure and replace if defective. Refer to DPC troublesho
6.	Oven can program but timer does not start countdown.	1. Open or loose wiring of secondary latch switch 2. Off-alignment of secondary latch switch 3. Defective secondary latch switch	Adjust door and latch sv
7.	Microwave output is low. Oven takes longer time to cook food.	1. Decrease in power source voltage 2. Open or loose wiring of magnetron filament circuit.(Intermittent oscillation) 3. Aging change of magnetron	Consult electrician
8.	Fan motor turns on and turntable rotates when door is opened.	1. Shorted primary latch switch	
9.	Oven does not operate and return to plugged in mode as soon as start pad is pressed.	1. Defective DPC	Check tighten screws or escutcheon base bracket board.
10.	Loud buzzing noise can be heard.	1. Loose fan and fan motor	
11.	Turntable motor does not rotate.	1. Open or loose wiring of turntable motor 2. Defective turntable motor	
12.	Oven stops operation during cooking.	1. Open or loose wiring of primary and secondary latch switch 2. Operation of thermal cutout	Adjust door and latch sv

	SYMPTOM	CAUSE	CORRECTION:
13.	Oven returns to plugged in mode after 18 seconds elapses on the Auto sensor cooking mode.	1. Open or loose wiring of sensor terminal from DPC 2. Open steam sensor 3. Defective DPC	

13.1. Trouble related to digital programmer circuit

SYMPTOM	STEP	CHECK	RESULT	CAUSE/CORRECTION
No display when oven is first plugged in. Oven is dead.	1	Fuse pattern of DPC	Normal	→ STEP 2
			Open (NOTE)	Shorted Circ ZNR, L.V.T., C Lamp etc. Replace
	2	Low voltage transformer (LVT) secondary voltage	Abnormal 0V	LVT
			Normal	→ Step 3
	3	IC-1 pin 47 voltage	Abnormal	IC-10
			Normal = 5V	IC-1, CX320, etc.

NOTE

Procedure of fuse pattern repairing is as follows:

1. When the fuse pattern (PF2) opens.

(1) Remove the jumper wire (PF1).

(2) Insert the removed jumper wire (PF1) to "(PF2)" position and solder it. If both "PF1" and "PF2" patterns are open, please replace DPC.

2. When the fuse pattern (PF4) opens.

(1) Remove the jumper wire (PF3).

(2) Insert the removed jumper wire (PF3) to "(PF4)" position and solder it. If both "PF3" and "PF4" patterns are open, please replace DPC.


NOTE:* At the time of these repairs, make visual inspection of the varistor for burning damage and examine the transformer with tester for the presence of layer short-circuit (check primary coil resistance). If any abnormal condition is detected, replace the defective parts.

No key input	1	Membrane switch continuity	Abnormal	Membrane switch
			Normal	IC-1
No beep sound	1	IC-1 pin 8 voltage	Abnormal	IC-1
			Normal	BUZZER, Q220
Power relay A(RY-1) does not turn on even though the program has been set and the start pad is tapped	1	IC-1 pin 41 voltage while operation	Abnormal	IC-1
			Normal = 5V	→ Step 2
	2	Short circuit between pin 8 and pin13 of IC-220	Still not turn on	RY-2
			RY-2 turns on	IC-220
No microwave oscillation at any power setting	1	IC-1 pin 22 voltages while operation at high power	Abnormal	IC-1
			Normal 22---5V	→ Step 2
	2	Q220 transistor	Abnormal	Q220
			Normal	RY-1

SYMPTOM	STEP	CHECK	RESULT	CAUSE/CORRECTION
Dark or unclear display	1	Replace display and check operation	Normal	DISPLAY
			Abnormal	IC-1
Missing or lighting of unnecessary segment	1	Replace IC-1 and check operation	Normal	IC-1
			Abnormal	DISPLAY
H97/H98 appears in window and oven stops operation. Program High power for 1 minute and conduct following test quickly, unless H97/H98 appears and oven stops. [NEW H.V.]	1	Unplug CN702(2 pin) connector and measure voltage between terminals	0V	1. Latch Switch 2. DPC/Power
			AC line voltage of 120V	→ Step 2
	2	Unplug CN701(3 pin) connector and measure pin 1 voltage	0V	DPC
			Approx. AC 3V	Magnetron

13.2. Troubleshooting of inverter circuit (U) and magnetron [NEW H.V.]

This oven is programmed with a self diagnostics failure code system which will help for troubleshooting. H97, H98, and H99 are the provided failure codes to indicate magnetron and inverter circuit problem areas. This section explains failure codes of H97, H98, and H99. First, you must program the DPC by pressing [Clock] , [Timer] , [Start] , [Power Level] . Program unit for operation. H97, H98, H99 appears in display window a short time after start key is pressed and there is no microwave oscillation.

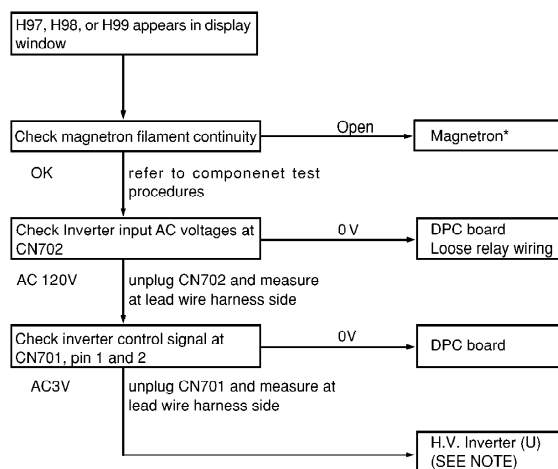


NOTE: After check, unplug unit to reset to normal operation mode.

NOTE: DO NOT try to repair this Inverter Power Supply (U) and also DO NOT RE-ADJUST PRESET VOLUME on the board. It is very dangerous to repair or adjust without sufficient test equipment because this circuit handles very high voltage and very large current. Off alignment of inverter board operation is dangerous. Operating a misaligned Inverter circuit is dangerous due to the very high voltage and current that is produced by this board. Defective boards must be replaced with a new one.

* Check magnetron filament for open or short to casing before proceeding to determine a good magnetron.

Alternate way to troubleshoot oven with AC Ampere meter used

H97, H98, H99 appears in display window a short time after start key is pressed and no microwave oscillation with AC Ampere meter used for troubleshooting

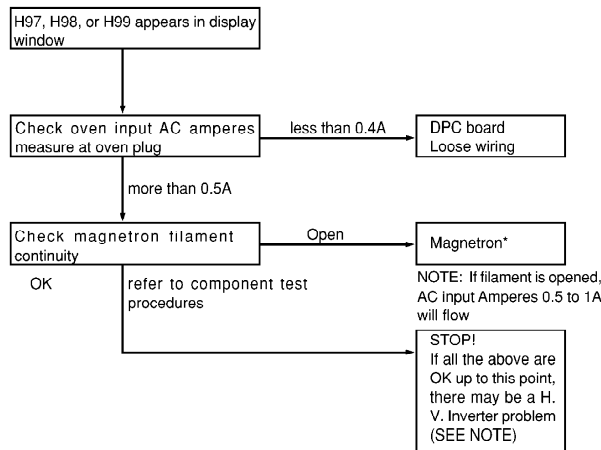

NOTE: DO NOT try to repair this Inverter Power Supply (U) and also DO NOT

RE-ADJUST PRESET VOLUME on the board. It is very dangerous to repair or adjust without sufficient test equipment because this circuit handles very high voltage and very large current. Off alignment of inverter board operation is dangerous. Operating a misaligned Inverter circuit is dangerous due to the very high voltage and current that is produced by this board. Defective boards must be replaced with a new one.

* Check magnetron filament for open or short to casing before proceeding to determine a good magnetron.

NOTE: After check, unplug unit to reset to normal operation mode.

13.3. How to check the semiconductors using an OHM meter

Diode

A

(ANODE)

K

(CATHODE)

	FORWARD	REVERSE
A-K	SMALL	∞

Transistor

NPN Transistor

2SC.....

2SD.....

(COLLECTOR)
C
(BASE)
B
(EMITTER)
E

	FORWARD	REVERSE
B-E	SMALL	∞
B-C	SMALL	∞
C-E	∞	∞

PNP Transistor

2SA.....

2SB.....

E
C
B

	FORWARD	REVERSE
B-E	SMALL	∞
C-B	SMALL	∞
C-E	∞	∞

Digital Transistor

PNP Transistor

N4111

C
B
E

	FORWARD	REVERSE
E-B	10k Ω ~ 30k Ω	10k Ω ~ 30k Ω
C-B	50k Ω ~ 90k Ω	∞
C-E	40k Ω ~ 80k Ω	∞


IGBT

(INSULATED GATE BIPOLAR TRANSISTOR)

C (COLLECTOR)
G (GATE)
E (EMITTER)

	FORWARD	REVERSE
E-C	SMALL	∞
E-G	∞	∞
C-G	∞	∞

14. EXPLODED VIEW AND PARTS LIST

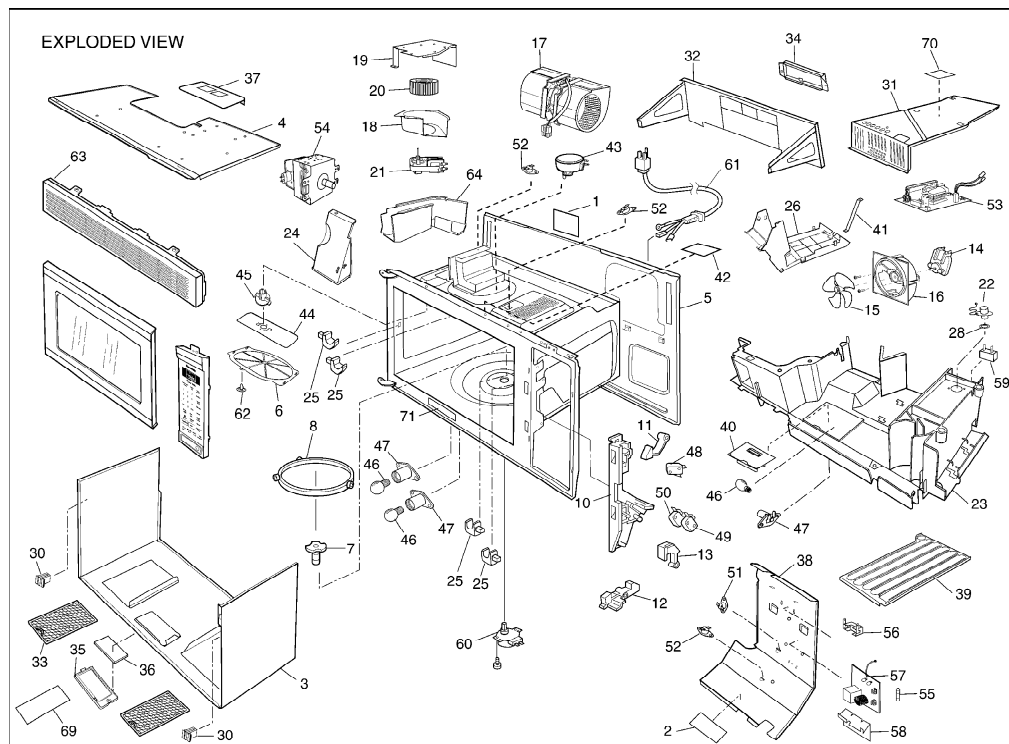

15. PARTS LIST


NOTE:

1. When ordering replacement part(s), please use part number(s) shown in this part list.
Do not use description of the part.
2. Important safety notice:
Components identified by ⚠ mark have special characteristics important for safety.
When replacing any of these components, use only manufacture's specified parts.

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
<u>1</u>		F00205H00AP	CAUTION LABEL	1	APH
1		F00067600CP	CAUTION LABEL	1	CPH
<u>2</u>		F00335H00AP	FUSE LABEL	1	
<u>3</u>		F110D5H00SAP	CABINET BODY (U)	1	S262SF
3		F110D5H10BAP	CABINET BODY (U)	1	S262BF, S252BF
3		F110D5H10HAP	CABINET BODY (U)	1	S262WF, S252WF
<u>4</u>		F100D5H00AP	BASE PLATE (U)	1	
<u>5</u>		F201A5H00AP	OVEN (U)	1	S262SF/BF/WF
5		F201A5H20AP	OVEN (U)	1	S252BF/WF
<u>6</u>		F20115H00AP	COVER	1	
<u>7</u>		F21314W00AP	PULLY SHAFT	1	
<u>8</u>		J290D-4N30BP	ROLLER RING (U)	1	
<u>10</u>		E3020-8000BP	DOOR HOOK	1	
<u>11</u>		E3136-8000BP	HOOK LEVER A	1	
<u>12</u>		E31374830AP	HOOK LEVER B	1	
<u>13</u>		E31384830AP	HOOK LEVER C	1	
<u>14</u>		F40015H00AP	FAN MOTOR A	1	FOR INVERTER (U) COOLING
<u>15</u>		F40085H00AP	FAN BLADE	1	FOR INVERTER (U) COOLING
<u>16</u>		F40255H00AP	ORIFICE	1	
<u>17</u>		F401W5H00AP	BLOWER MOTOR (U)	1	
<u>18</u>		F42485H00AP	FAN CASE C	1	
<u>19</u>		F41585H00AP	FAN CASE INSTALLATION PLATE	1	
<u>20</u>		F42505H00AP	SIROCCO FAN C	1	
<u>21</u>		F42675H00AP	FAN MOTOR B	1	FOR MAGNETRON COOLING
<u>22</u>		F601L5H00AP	SENSOR (BU)	1	S262SF/BF/WF
<u>23</u>		F40245H00AP	EXHAUST GUIDE A	1	
<u>24</u>		F44775H00AP	EXHAUST GUIDE	1	
<u>25</u>		F20025H00AP	RACK SUPPORT	4	S262SF/BF/WF
<u>26</u>		F65855H00AP	INVERTER BRACKET	1	
<u>28</u>		F62385H00AP	WASHER	1	S262SF/BF/WF
<u>30</u>		F201H5H00AP	MAGNET CASE (U)	2	
<u>31</u>		F16035H00AP	TOP FRONT COVER	1	
<u>32</u>		F100T5H00AP	BACK PLATE B (U)	1	
<u>33</u>		F400B5H00AP	FILTER (U)	2	
<u>34</u>		F400K5H00AP	EXHAUST ADAPTER	1	
<u>35</u>		F63175H00SAP	GLASS PLATE HOLDER	1	S262SF
35		F63175H10BAP	GLASS PLATE HOLDER	1	S262BF, S252BF
35		F63175H10HAP	GLASS PLATE HOLDER	1	S262WF, S252WF
<u>36</u>		F64375H00AP	GLASS PLATE	1	
<u>37</u>		F41575H00AP	FAN INSTALLATION PLATE	1	
<u>38</u>		F42175H00AP	COVER PLATE	1	
<u>39</u>		F42205H00AP	COVER PLATE B	1	
<u>40</u>		F607V5H00AP	LAMP COVER (U)	1	
<u>41</u>		F61845H00AP	GROUNDING PLATE	1	
<u>42</u>		F60405H00AP	LAMP MEMBRANE	1	


Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
43		F61445H00AP	STIRRER MOTOR	1	
44		F20155H00AP	STIRRER	1	
45		F20165H00AP	ANTENNA SUPPORT	1	
46		F60305H00AP	INCANDESCENT LAMP	3	
47		F61525H00AP	SOCKET	3	
48		A6142-F60	MICROSWITCH	1	(PRIMARY LATCH SWITCH) (V-15G-3C26)
49		A61425180AP	MICROSWITCH	1	(SECONDARY LATCH SWITCH) (L-3C2-2)
50		A61785180AP	MICROSWITCH	1	(SHORT SWITCH) (L-2C2-2)
51		F61455H00AP	THERMAL CUTOUT	1	
52		F61455E60XN	THERMAL CUTOUT	3	
53		A606Y4T00AP	H.V.INVERTER (U)	1	APH
53		A606Y4T00CP	H.V.INVERTER (U)	1	CPH
54		2M261-M32F	MAGNETRON	1	APH
54		2M261-M32G	MAGNETRON	1	CPH
55		B62308250AP	FUSE	1	18A/125V
56		B62314000AP	FUSE HOLDER	1	APH
57		J692Y4T00CP	NOISE FILTER (U)	1	CPH
58		F82605H00AP	NOISE FILTER BRACKET	1	CPH
59		F66985H00AP	MOTOR CAPACITOR	1	
60		F63264080AP	TURNTABLE MOTOR	1	
61		F900C5H00AP	AC CORD W/PLUG	1	APH
61		F900C5H00CP	AC CORD W/PLUG	1	CPH
62		F90804W00AP	CANOE CLIP	1	FOR COVER
63		F101V5H00AP	VENT GRILLE (U)	1	S262SF
63		F101V5H10BAP	VENT GRILLE (U)	1	S262BF, S252BF
63		F101V5H10HAP	VENT GRILLE (U)	1	S262WF, S252WF
64		F48435H00AP	INHALE GUIDE A	1	
69		F01725H00AP	CAUTION LABEL	1	
70		F00565H00AP	CAUTION LABEL	1	
71		F03345H10AP	MENU LABEL	1	S262SF/BF/WF APH
71		F03345H20AP	MENU LABEL	1	S252BF/WF APH
71		F03345H10CP	MENU LABEL	1	S262SF/BF/WF CPH
71		F03345H20CP	MENU LABEL	1	S252BF/WF CPH

16. DOOR ASSEMBLY

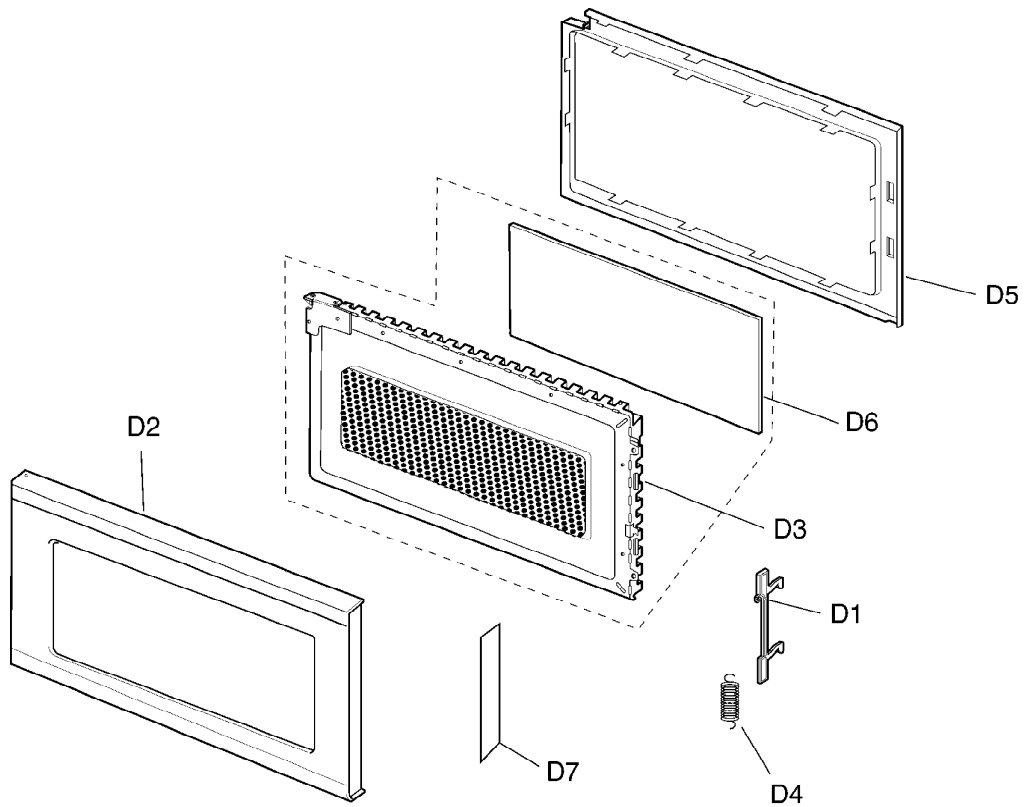


Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
D1		F3018-1200	DOOR KEY A	1	
D2	⚠	F302A5H00AP	DOOR A (U)	1	S262SF
D2	⚠	F302A5H00BAP	DOOR A (U)	1	S262BF, S252BF
D2	⚠	F302A5H00HAP	DOOR A (U)	1	S262WF, S252WF
D3	⚠	F302K5H00AP	DOOR E (U)	1	
D4		F30214000AP	DOOR KEY SPRING	1	
D5	⚠	F30855H00AP	DOOR C	1	
D6	⚠	F31455H00AP	DOOR SCREEN A	1	
D7		F02459660AP	DHHS LABEL	1	APH
D7		F04114180CP	DHHS LABEL	1	CPH

17. WIRING MATERIALS

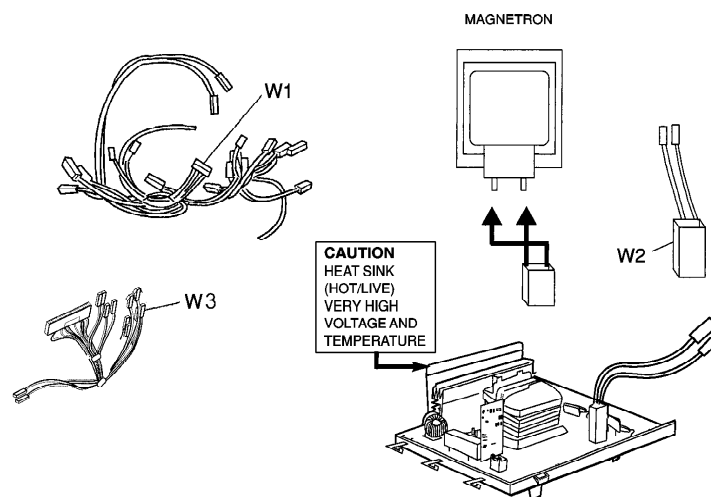


Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
W1	F030A5H00AP	LEAD WIRE HARNESS	1	APH
W1	F030A5H00CP	LEAD WIRE HARNESS	1	CPH
W2	F030E5H00AP	H.V.LEAD WIRE	1	APH
W2	F030E5H00CP	H.V.LEAD WIRE	1	CPH
W3	F03535H00AP	LEAD WIRE HARNESS U	1	

18. ESCUTCHEON BASE ASSEMBLY

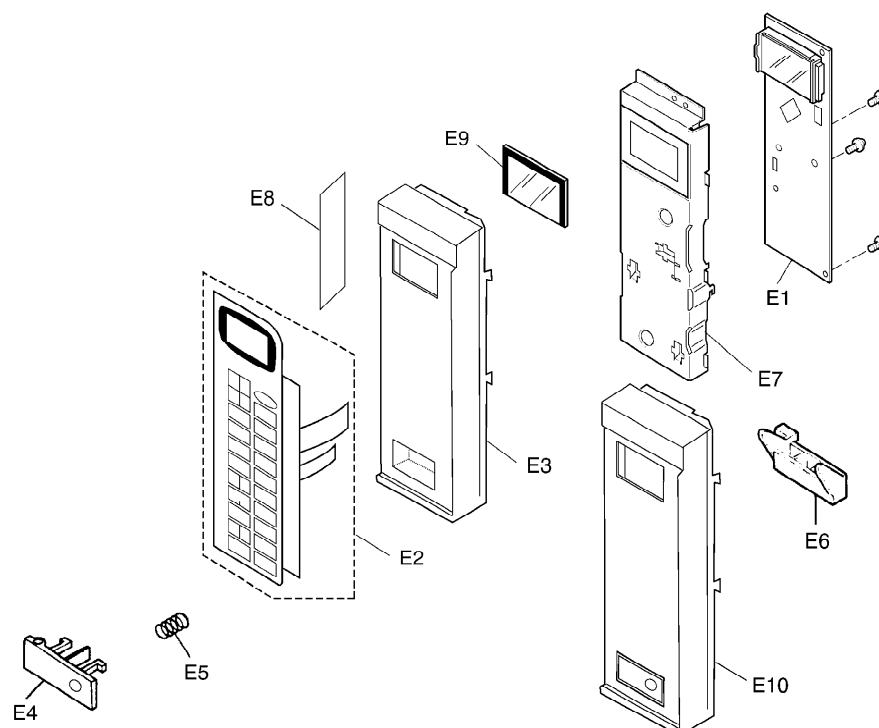

Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
<u>E1</u>	F603L5H00AP	D.P.CIRCUIT	1	S262SF APH, S262BF/WF APH
E1	F603L5H20AP	D.P.CIRCUIT	1	S252BF/WF APH
E1	F603L5H00CP	D.P.CIRCUIT	1	S262SF CPH, S262BF/WF CPH
E1	F603L5H20CP	D.P.CIRCUIT	1	S252BF/WF CPH
<u>E2</u>	F630Y5H10BAP	MEMBRANE SWITCH (U)	1	S262SF/BF APH
E2	F630Y5H10HAP	MEMBRANE SWITCH (U)	1	S262WF APH
E2	F630Y5H20BAP	MEMBRANE SWITCH (U)	1	S252BF APH
E2	F630Y5H20HAP	MEMBRANE SWITCH (U)	1	S252WF APH
E2	F630Y5H10BCP	MEMBRANE SWITCH (U)	1	S262SF/BF CPH
E2	F630Y5H10HCP	MEMBRANE SWITCH (U)	1	S262WF CPH
E2	F630Y5H20BCP	MEMBRANE SWITCH (U)	1	S252BF CPH
E2	F630Y5H20HCP	MEMBRANE SWITCH (U)	1	S252WF CPH
<u>E3</u>	F80345H10BAP	ESCUTCHEON BASE	1	S262BF, S252BF
E3	F80345H10HAP	ESCUTCHEON BASE	1	S262WF, S252WF
<u>E4</u>	F80725H10BAP	DOOR OPENING BUTTON	1	S262BF, S252BF
E4	F80725H10HAP	DOOR OPENING BUTTON	1	S262WF, S252WF
<u>E5</u>	F80375950AP	OPENING BUTTON SPRING	1	
<u>E6</u>	F82565H00AP	DOOR OPENING LEVEL	1	
<u>E7</u>	F81275H00AP	BACK PLATE	1	
<u>E8</u>	F00075H00AP	NAME PLATE	1	S262SF APH
E8	F00075H10BAP	NAME PLATE	1	S262BF APH
E8	F00075H10HAP	NAME PLATE	1	S262WF APH
E8	F00075H20BAP	NAME PLATE	1	S252BF APH
E8	F00075H20HAP	NAME PLATE	1	S252WF APH
E8	F00075H00CP	NAME PLATE	1	S262SF CPH
E8	F00075H10BCP	NAME PLATE	1	S262BF CPH
E8	F00075H10HCP	NAME PLATE	1	S262WF CPH
E8	F00075H20BCP	NAME PLATE	1	S252BF CPH
E8	F00075H20HCP	NAME PLATE	1	S252WF CPH
<u>E9</u>	F80025H00AP	ESCUTCHEON B	1	
<u>E10</u>	F800L5H00AP	ESCUTCHEON BASE (U)	1	S262SF


19. PACKING AND ACCESORIES

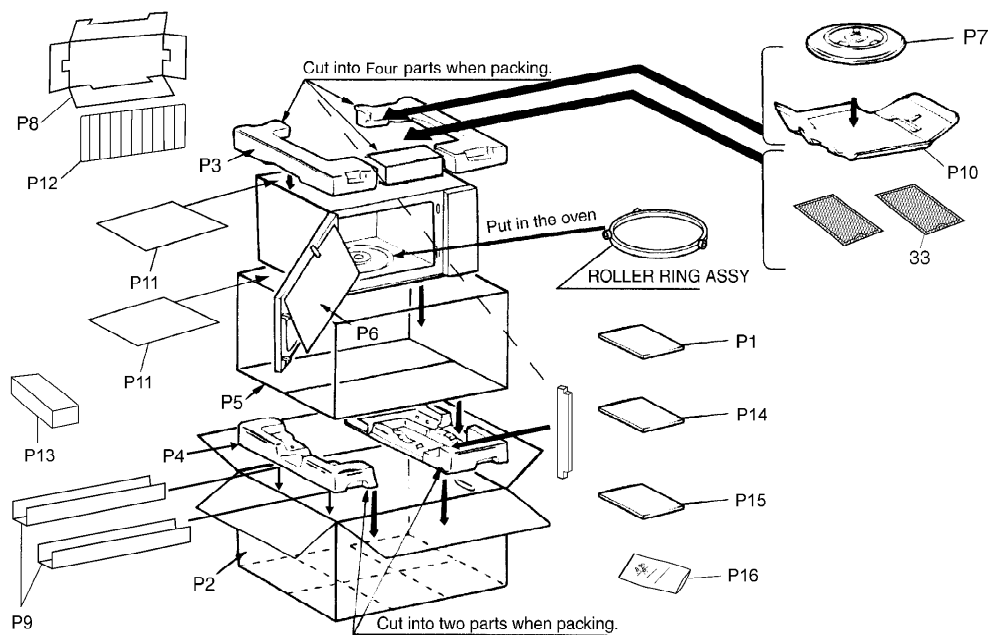

Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
P1	F00035H00AP	INSTRUCTION MANUAL	1	APH
P1	F00035H00CP	INSTRUCTION MANUAL	1	CPH
P2	F01025H00AP	PACKING CASE PAPER	1	S262SF APH
P2	F01025H10BAP	PACKING CASE PAPER	1	S262BF APH
P2	F01025H10HAP	PACKING CASE PAPER	1	S262WF APH
P2	F01025H20BAP	PACKING CASE PAPER	1	S252BF APH
P2	F01025H20HAP	PACKING CASE PAPER	1	S252WF APH
P2	F01025H00CP	PACKING CASE PAPER	1	S262SF CPH
P2	F01025H10BCP	PACKING CASE PAPER	1	S262BF CPH
P2	F01025H10HCP	PACKING CASE PAPER	1	S262WF CPH
P2	F01025H20BCP	PACKING CASE PAPER	1	S252BF CPH
P2	F01025H20HCP	PACKING CASE PAPER	1	S252WF CPH
P3	F01045H00AP	UPPER FILLER	1	
P4	F01055H00AP	LOWER FILLER	1	
P5	F01065H00AP	P.E.BAG	1	
P6	F01075H00AP	DOOR SHEET	1	
P7	A06015H00AP	COOKING TRAY	1	
P8	F01175H00AP	TRAY PACKING B	1	S262SF/BF/WF
P9	F01485H00AP	REINFORCE BRACKET	2	
P10	F01085H00AP	TRAY PACKING	1	
P11	F01925H00AP	SHEET	2	
P12	F06025H00AP	OVEN RACK	1	S262SF/BF/WF
P13	F02185H00AP	PROTECTOR PACKING	1	
P14	F03135H00AP	INSTALLATION INSTRUCTION	1	
P15	F04315H00AP	UPPER-CABINET TEMPLATE	1	APH
P15	F04315H00CP	UPPER-CABINET TEMPLATE	1	CPH
P16	F011F5H00AP	ATTACHMENT	1	
33	F400B5H00AP	FILTER (U)	2	

20. DIGITAL PROGRAMMER CIRCUIT

SCHEMATIC DIAGRAM

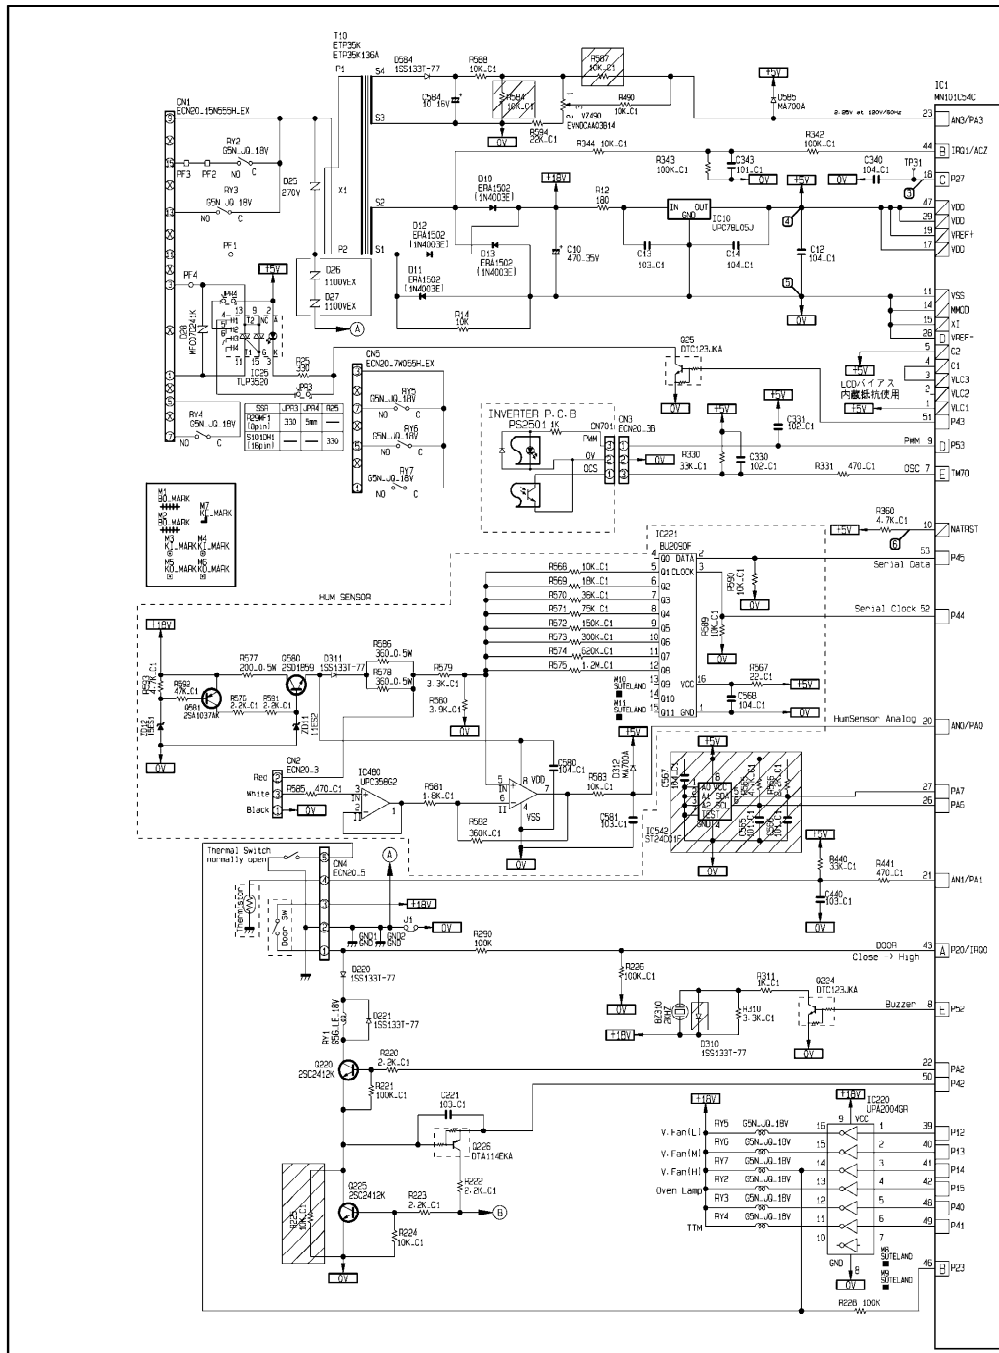

Ref. No.	Part No.	Part Name & Description	Pcs/Set	Remarks
BZ310	AEFBTFM571	BUZZER	1	2.0KHz
C221, C440, C13	AECUU06F103Z	CHIP CAPACITOR	3	0.01 μ F/50V
C582	AECUU06F103Z	CHIP CAPACITOR	1	0.01 μ F/50V (S262SF/BF/WF)
C343	AECUU06C101J	CHIP CAPACITOR	1	100PF/50V
C12, C14, C340	AECUT06F104Z	CHIP CAPACITOR	3	0.1 μ F/25V
C568, C580, C583	AECUT06F104Z	CHIP CAPACITOR	3	0.1 μ F/25V (S262SF/BF/WF)
C330, C331	AECUU06R102K	CHIP CAPACITOR	2	1000PF/50V
C10	AECETK1V102B	AL CHEM CAPACITOR	1	100 μ F/35V (S262SF/BF/WF)
C10	AECETK1V471B	AL CHEM CAPACITOR	1	470 μ F/35V (S252BF/WF)
C584	AECETS1C100B	AL CHEM CAPACITOR	1	10 μ F/16V
C25	ECQE2A104MWA	CAPACITOR	1	0.1 μ F/250V (APH)
CN1	AEEMXH55515W	CONNECTOR	1	15 Pin
CN2	AEEMXH00703W	CONNECTOR	1	3 Pin (S262SF/BF/WF)
CN3	AEEMXH00703B	CONNECTOR	1	3 Pin
CN4	AEEMXH01H05W	CONNECTOR	1	5 Pin
CN5	AEEMXH05507W	CONNECTOR	1	7 Pin
CN6	AEEM10FDZBTM	CONNECTOR	1	10 Pin
	F66175E40XN	LCD HOLDER	1	
	F67525E40XN	DIFFUSION SHEET	1	
DISP110	AEDDHJ5H00AP	LCD	1	
CX320	AEFOS800MG06	CERAMIC RESONATOR	1	8.0MHz
D10, D11, D12, D13	AEDNERA1502	DIODE	4	
D40, D41, D220, D221, D584	AESS133T-77	DIODE	5	
D585	AEDNRB721Q	DIODE	1	
D312	AEDNRB721Q	DIODE	1	(S262SF/BF/WF)
D25	AERZ271KD10A	VARISTOR	1	
D26, D27	AERZ102KD10A	VARISTOR	2	(CPH)
D28	AERZ241KD07A	ZENER DIODE	1	
D180, D181, D182, D183, D184, D185, D186, D187, D188, D189	AESQSML210MT	CHIP-LED	10	
IC1	MN101C54CDW	L.S.I	1	
IC220	AEICU2004GR	IC	1	
IC480	AEICUPC358G2	IC	1	(S262SF/BF/WF)
IC25	AEICR29MF1	IC	1	
IC10	AEIC78L05J-T	IC	1	
IC221	AEICBU2090F	IC	1	(S262SF/BF/WF)
IC500	AEIC78M15AFH	IC	1	(S262SF/BF/WF)
Q226	AESA14EKE	CHIP DIDI-TRANSISTOR	1	
Q25, Q182, Q224	AESC23JKE	CHIP DIDI-TRANSISTOR	3	
Q180	2SD1859TV2Q	TRANSISTOR	1	
Q581	2SA1037AK	TRANSISTOR	1	(S262SF/BF/WF)
Q40, Q181, Q220, Q225	2SC2412KT146	CHIP TRANSISTOR	4	
R311	AERJ06J102R	CHIP RESISTOR	1	1K Ω , 1/16W, 5%
R224, R340, R341, R344, R490, R588	AERJ06J103R	CHIP RESISTOR	6	10K, 1/16W, 5%
R568, R583, R589, R590	AERJ06J103R	CHIP RESISTOR	4	10K, 1/16W, 5% (S262SF/BF/WF)
R221, R226, R342, R343, R496	AERJ06J104R	CHIP RESISTOR	5	100K, 1/16W, 5%
R575	AERJ06J125R	CHIP RESISTOR	1	1.2M, 1/16W, 5% (S262SF/BF/WF)
R572	AERJ06J154R	CHIP RESISTOR	1	150K, 1/16W, 5% (S262SF/BF/WF)
R581	AERJ06J182R	CHIP RESISTOR	1	1.8K, 1/16W, 5% (S262SF/BF/WF)
R569	AERJ06J183R	CHIP RESISTOR	1	18K, 1/16W, 5% (S262SF/BF/WF)
R181, R320	AERJ06J220R	CHIP RESISTOR	2	22 Ω , 1/16W, 5%

Ref. No.		Part No.	Part Name & Description	Pcs/Set	Remarks
R567		AERJ06J220R	CHIP RESISTOR	1	22 Ω , 1/16W, 5% (S262SF/BF/WF)
R182, R183		AERJ06J221R	CHIP RESISTOR	2	220 Ω , 1/16W, 5%
R220, R222, R223		AERJ06J222R	CHIP RESISTOR	3	2.2K, 1/16W, 5%
R594		AERJ06J223R	CHIP RESISTOR	1	22K, 1/16W, 5%
R573		AERJ06J304R	CHIP RESISTOR	1	300K, 1/16W, 5% (S262SF/BF/WF)
R310		AERJ06J332R	CHIP RESISTOR	1	3.3K, 1/16W, 5%
R579		AERJ06J332R	CHIP RESISTOR	1	3.3K, 1/16W, 5% (S262SF/BF/WF)
R330, R440		AERJ06J333R	CHIP RESISTOR	2	33K, 1/16W, 5%
R570		AERJ06J363R	CHIP RESISTOR	1	36K, 1/16W, 5% (S262SF/BF/WF)
R582		AERJ06J364R	CHIP RESISTOR	1	360K, 1/16W, 5% (S262SF/BF/WF)
R580		AERJ06J392R	CHIP RESISTOR	1	3.9K, 1/16W, 5% (S262SF/BF/WF)
R331, R441		AERJ06J471R	CHIP RESISTOR	2	470 Ω , 1/16W, 5%
R585		AERJ06J471R	CHIP RESISTOR	1	470 Ω , 1/16W, 5% (S262SF/BF/WF)
R360		AERJ06J472R	CHIP RESISTOR	1	4.7K, 1/16W, 5%
R593		AERJ06J472R	CHIP RESISTOR	1	4.7K, 1/16W, 5% (S262SF/BF/WF)
R592		AERJ06J473R	CHIP RESISTOR	1	47K, 1/16W, 5%
R574		AERJ06J624R	CHIP RESISTOR	1	620K, 1/16W, 5% (S262SF/BF/WF)
R571		AERJ06J753R	CHIP RESISTOR	1	75K, 1/16W, 5% (S262SF/BF/WF)
R14, R180		AERDY2TJ103T	CARBON FILM RESISTOR	2	10K, 1/4W, 5%
R228, R290		AERDY2TJ104T	CARBON FILM RESISTOR	2	100K, 1/4W, 5%
R40		AERDY2TJ154T	CARBON FILM RESISTOR	1	150K, 1/4W, 5%
R12		AERDY2TJ331T	CARBON FILM RESISTOR	1	330 Ω , 1/4W, 5%
R576, R577, R578, R586		AEROY2F3300T	RESISTOR	4	330 Ω , 1/4W, 5%
VZ490		AEVTZ6TLT103	VARIABLE RESISTOR	1	10K Ω VR
RY1		AEGG5G1A18	POWER RELAY	1	
RY2, RY3, RY4, RY5, RY6, RY7		AEBJQ1A18	POWER RELAY	6	
T10		AETP35K136A	LOW VOLTAGE TRANSFORMER	1	
ZD12		AESZMTZJ150B	ZENER DIODE	1	(S262SF/BF/WF)

03/02 / S-5H0 / S-5H1 / S-5H2 / Printed in China